SONY

LCD TV

Operating Instructions

(Setup Guide)

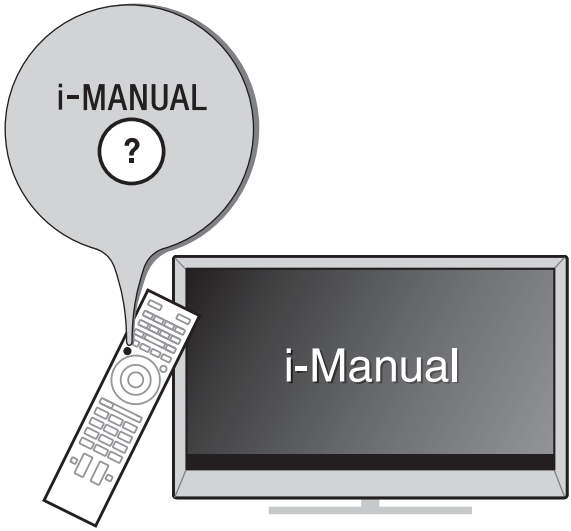

BRAVIA

Sony Customer Support
U.S.A.:
http://www.sony.com/tvsupport
Canada:
http://www.sony.ca/support

United States 1.800.222.SONY
Canada 1.877.899.SONY

Please Do Not Return
the Product to the Store

XBR-65X850A / 55X850A

Owner's Record

The model and serial numbers are located at the side and rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

Serial No.

CAUTION

To prevent electric shock and blade exposure, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted.

- Operate the TV only on 110-240 V AC (U.S.A./Canada 120 V AC)
- Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual of any other device or media used with this television and (ii) our website (http://www.sony.com/tvsupport) for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above.
- Do not use, store, or leave the 3D Glasses or battery near a fire, or in places with a high temperature, e.g., in direct sunlight, or in sun-heated cars.
- When using the simulated 3D function, please note that the displayed image is modified from the original due to the conversion done by this television.

Licensing Information

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Fergason Patent Properties, LLC:
U.S. Patent No. 5,717,422
U.S. Patent No. 6,816,141

Manufactured under license from Dolby Laboratories.

"Blu-ray Disc", "Blu-ray" and "Blu-ray Disc" logo are trademarks of Blu-ray Disc Association.

"BRAVIA" and BRAVIA, S-Force, Motionflow, BRAVIA Sync, and ® are trademarks or registered marks of Sony Corporation.

DLNA®, the DLNA Logo and DLNA CERTIFIED® are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

TrackID is a trademark or registered trademark of Sony Mobile Communications AB.

Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit www.gracenote.com.
CD, DVD, Blu-ray Disc, and music and video-related data from Gracenote, Inc., copyright © 2000-present Gracenote. Gracenote Software, copyright © 2000-present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, MusicID, VideoID, Video Explore, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

Opera® Devices SDK from Opera Software ASA. Copyright 1995-2013 Opera Software ASA. All rights reserved.

Wi-Fi, Wi-Fi Direct and Miracast are marks or registered marks of the Wi-Fi Alliance.

"Sony Entertainment Network logo" and "Sony Entertainment Network" are trademarks of Sony Corporation.

MHL, Mobile High-Definition Link and the MHL Logo are trademarks or registered trademarks of MHL Licensing, LLC.

Manufactured under license from DTS Licensing Limited. For U.S. and worldwide patent and trademark information, see www.dts.com/patents/legacy.aspx. (c) DTS Licensing Limited and DTS, Inc. 2012.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Mobile High-Definition Link

2.0 Channel

The 55 class has a 54.6 inch viewable image size and the 65 class has a 64.5 inch viewable image size (measured diagonally).

- The illustrations of the remote control used in this manual are of the RM-YD087 unless otherwise stated.
- The illustrations used in this manual may differ depending on your TV model.
- Retain this manual for future reference.

The BRAVIA® 4K TV Experience

Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV.
Please take a moment to register your TV at:
U.S.A.: http://productregistration.sony.com
Canada: http://www.sony.ca/registration

Four Steps to a 4K TV Experience

Set, Source, Sound, and Setup.

1 Set

Now that you have made the best selection in LED backlit LCD TV technology, be sure to remove all accessory contents from the packaging before setting up your TV.

2 Source

To experience the stunning detail of your **BRAVIA** TV, you need access to High-Definition programming.

- Upgrade your signal or content source to high-definition (4K) by contacting your HD service provider.
- Bring the astonishing resolution of your Sony 4K Ultra HD TV to life with Sony 4K Ultra HD Media Player. (The availability depends on region)
- Receive over-the-air HD broadcasts with an HD-quality antenna connected directly to the back of your TV. Visit **http://www.antennaweb.org** for more information on antenna selection and setup.
- Discover the wealth of entertainment now available on super-high resolution Blu-ray Disc™ player and other Sony HD equipment.

3 Sound

Complete the high-definition experience with a **BRAVIA** Sync™ surround sound system or A/V receiver from Sony.

4 Setup

Install your TV and connect your sources. See page 11 for sample connection diagrams. To help assure the highest quality for your 4K experience, use Sony HDMI (High-Definition Multimedia Interface) cables.

To learn more about 4K TV, visit:

U.S.A.: http://www.sony.com/HDTV
Canada: http://www.sony.ca/hdtv

This TV displays all video input signals in a resolution of 3,840 dots × 2,160 lines.

The following chart shows the high-definition (HD) and standard-definition (SD) video formats supported by your **BRAVIA** TV inputs.

	INPUT	VIDEO	AUDIO	SUPPORTED FORMATS								
				4K*1	1080/24p/30p	1080p*1	1080i	720/24p/30p	720p*1	480p	480i	PC*2
4K / HD	HDMI			✓	✓	✓	✓	✓	✓	✓	✓	✓
	COMPONENT	Y P_B P_R	Audio L/R			✓	✓		✓	✓	✓	
SD	VIDEO	Composite video connection	Audio L/R								✓	

*1 For details of supported formats, refer to the "Specifications" in this manual.

*2 For supported PC formats refer to the i-Manual.

About this manual (Operating Instructions)

This manual explains how to setup your TV. For more information on how to use BRAVIA TV, refer to the “Electronic manual”.

Operating Instructions

Explains how to setup your TV such as connections, initial setup, and basic operations.

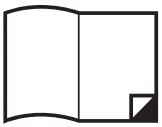

For more information, press the **i-MANUAL** button

Electronic manual (i-Manual)

Explains how to use all the features. See page 28 on how to use the i-Manual.

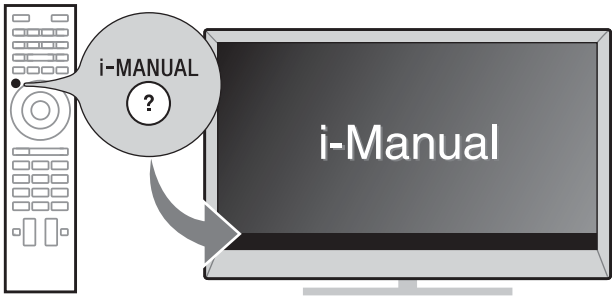

Images and illustrations used in this manual may differ from the actual screen.

Table of Contents

Getting Started

Checking the accessories....8
Inserting batteries into the remote control....8
Before setting up your TV....9
1: Attaching the Table-Top Stand....10
2: Connecting the TV....11
3: Securing the TV....17
4: Bundling the cables....19
5: Connecting the TV to the Internet....19
6: Running initial setup....20
Using a Wall-Mount Bracket....21
Installing the TV against a wall or enclosed area....22

Using Your BRAVIA TV

Watching TV ▶....23

Selecting various functions and settings (Home Menu)....25
Watching Internet Video....27

Looking for Instructions

Looking for instructions in the electronic manual (i-Manual) ▶...28

Additional Information

Troubleshooting....31
How to care for your BRAVIA TV....32
Specifications....33
Safety Information....35

Checking the accessories

Remote control (1)*1
One-touch Remote Control (1)*1
Size AAA batteries (4)
Table-Top Stand (1)*2
Fixing screws for Table-Top Stand (M5 × 12) (4)
Active 3D Glasses (battery included) (4)
Operating Instructions (this manual) and other documents

*1 Please refer to the model name printed on the remote control.
*2 Assembling the Table-Top Stand is required. Refer to the supplied Table-Top Stand leaflet to assemble the Table-Top Stand.

Inserting batteries into the remote control

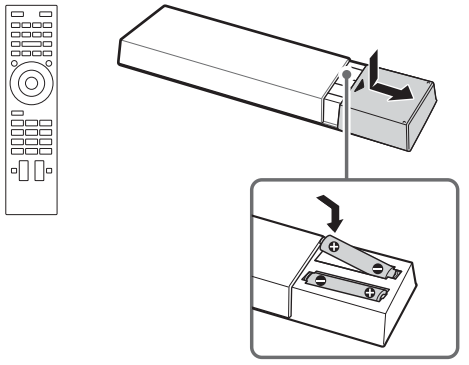

1 Remove the protection sheet.
2 Push and slide the cover to open.

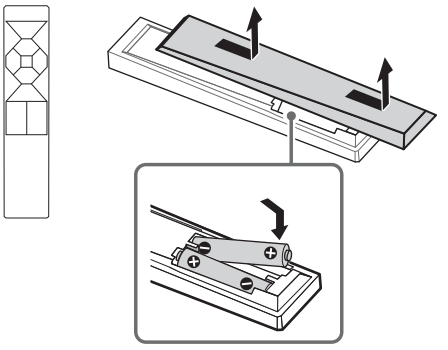

1 Remove the protection sheet.
2 Push and slide the cover to open.

✍

- One-touch Remote Control can only be used after registration with the TV. For more information on how to register, press **i-MANUAL**, then select “Table of Contents” → “Configuring Various Settings” → “General Settings” → “Setting One-touch Remote Control”.

■ Guidelines for Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

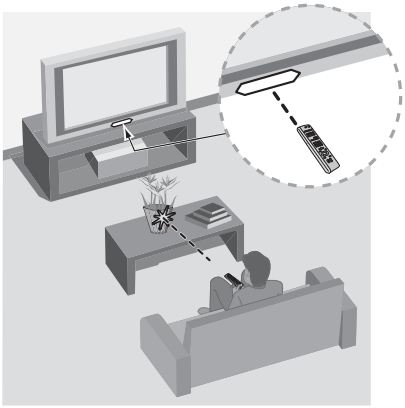

- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

Before setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See page 21 (Using a Wall-Mount Bracket) if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver (not supplied) and the supplied screws to complete the task. Look for the supplied Table-Top Stand instruction leaflet.

Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Carry the TV with the adequate number of people; larger size TVs require two or more people.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.

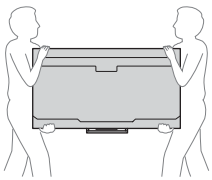

- Ensure your TV has adequate ventilation, see page 22.
- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid installing the TV in a room with reflective wall and floor materials.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.

(Continued)

- Ensure that there are no objects in front of the TV.

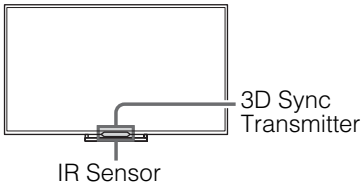

1: Attaching the Table-Top Stand

Refer to the supplied Table-Top Stand leaflet for proper attachment.

- Do not put stress on the LCD panel or the frame around the screen.
- Be careful to not pinch your hands or the AC power cord when you install the TV set to the Table-Top Stand.

1 Place the TV set on the Table-Top Stand.

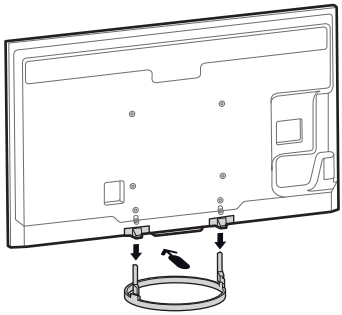

Arrow direction shows front of the Table-Top Stand.

2 Fix the TV to the Table-Top Stand using the supplied screws. The arrow marks ⬆ indicate the location of the screw holes used for securing the Table-Top Stand.

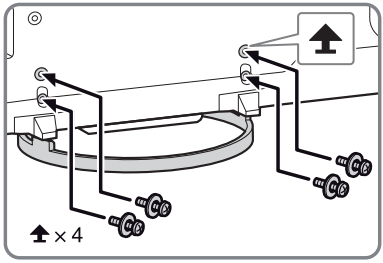

✍
- If using an electric screwdriver, set the torque at approximately 1.5 N·m {15 kgf·cm}.

Detaching the Table-Top Stand from the TV

To detach the Table-Top Stand from the TV, remove the screws ⬆ fixed in step 2.

✍
- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.
- When installing the TV on a wall, remove the screws from the rear of the TV. Be sure to store the removed screws in a safe place, keeping them away from children.
- When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

2: Connecting the TV

✍
- Use an antenna cable connector no greater than 14 mm thick.
- Use an HDMI cable connector within 12 mm (thickness) × 21 mm (width).
- Use Sony HDMI cable with “High Speed” indication for HDMI connection.
- For more information on connections, refer to the i-Manual.

■ Shown with a Set Top Box with HDMI connection

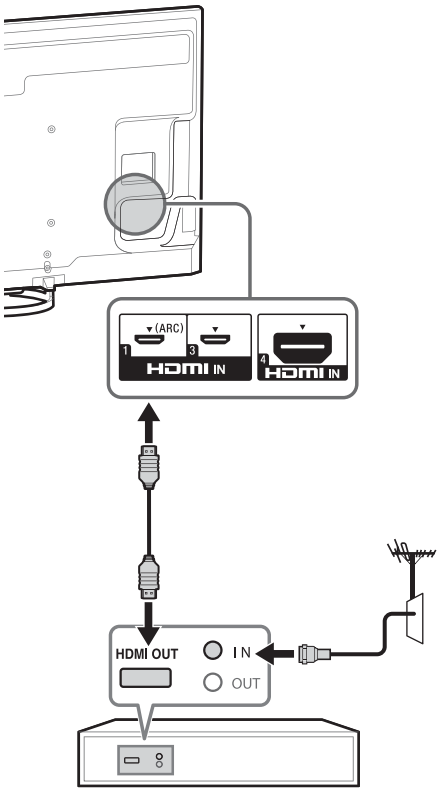

Set Top Box

Recommendation of the F type plug
Projection of the inner wire from the connection part must be less than 1.5 mm.



(Reference drawing of the F type plug)

■ Shown with a Set Top Box with COMPONENT connection

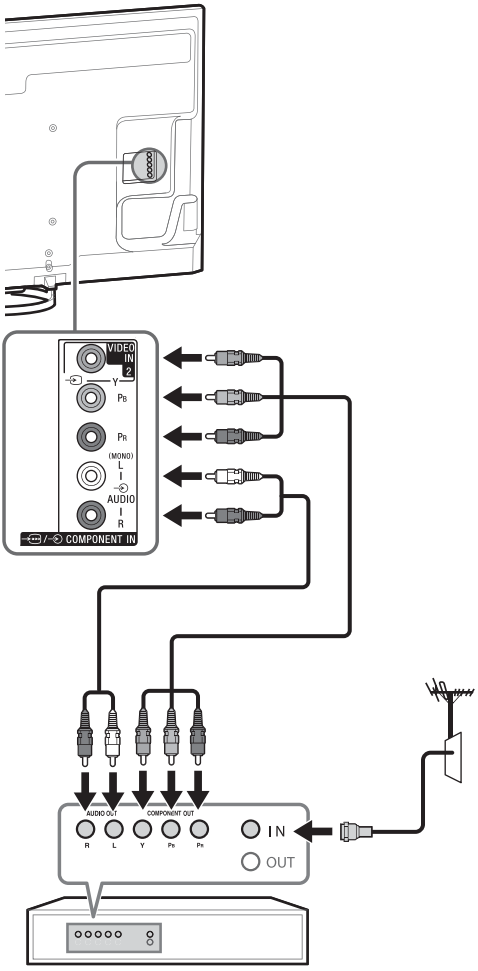

Set Top Box

■ Cable System or VHF/UHF Antenna System

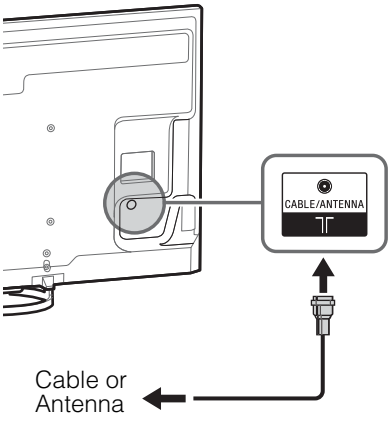

■ Shown with MHL device with MHL connection

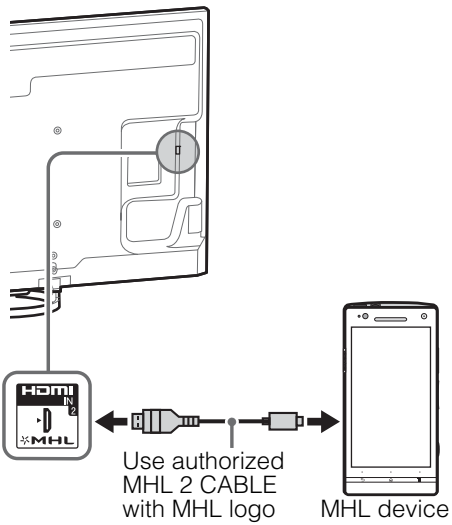

The MHL (Mobile High-Definition Link) enables the TV to communicate with a connected MHL-compatible device. The TV can charge the connected MHL-compatible device while playing photo/music/video from it. You can use the TV remote control to control the connected MHL-compatible device.

✍

- If **Auto Input Change (MHL)** is set to **On**, the TV automatically switches to HDMI IN 2/MHL from other input when MHL-compatible device is connected to HDMI IN 2/MHL jack. The availability of **Auto Input Change (MHL)** depends on whether the MHL-compatible device can support this feature.
- You can continue normal usage of the connected MHL-compatible device (such as receiving calls) depending on its capability.
- Some remote control functions may not be available depending on features of the connected MHL-compatible device. Please refer to the device manual for details.
- If **Charge MHL during Power Off** is set to **On**, you can continue charging the MHL-compatible device even when the TV is in standby mode.
- This product is officially MHL-certified for operation with other MHL-certified devices. If you encounter any problems when using the MHL function, please consult the device manufacturer for support.

(Continued)

■ Shown with BRAVIA® Sync™ Basic Connection

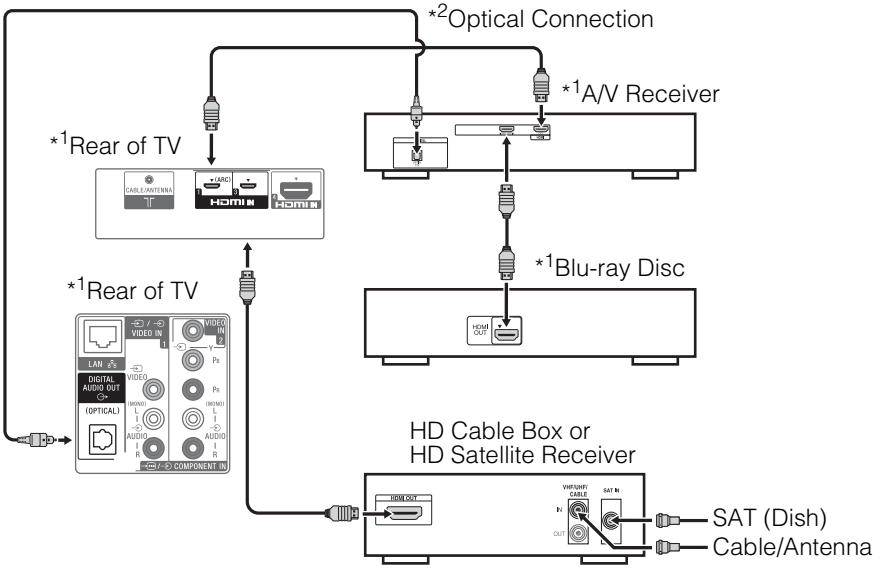

*1 Signifies a BRAVIA Sync capable device.
*2 The optical connection is only needed for A/V receivers that do not support ARC (Audio Return Channel).

■ Shown with Basic Connection with Home Theater System

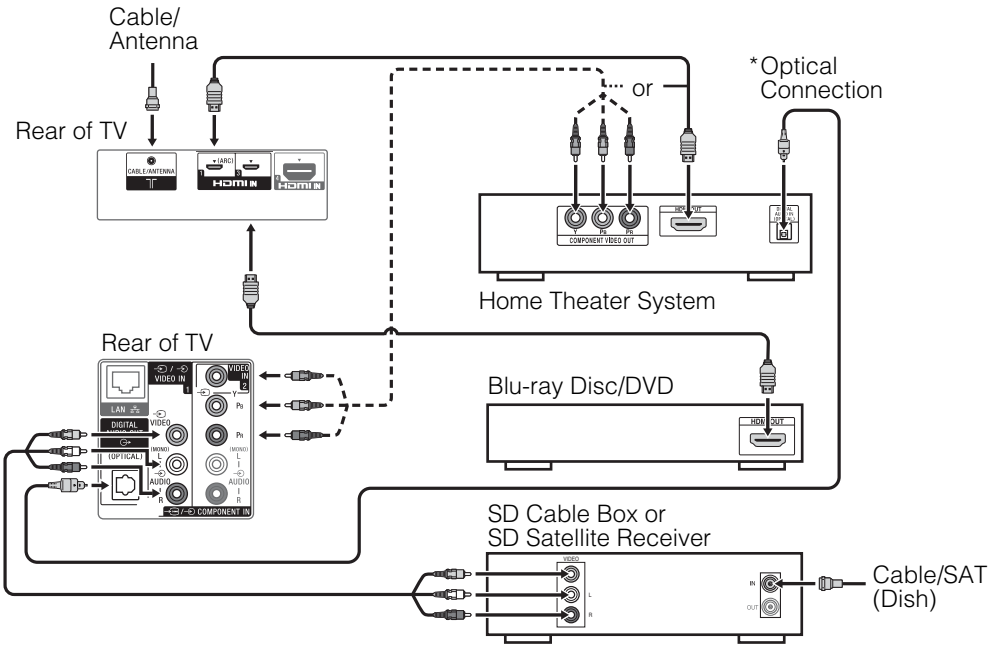

* The optical connection is only needed for home theater system that do not support ARC (Audio Return Channel) when connecting with HDMI.

(Continued)

■ Shown with PC Connection with SD VCR/DVD

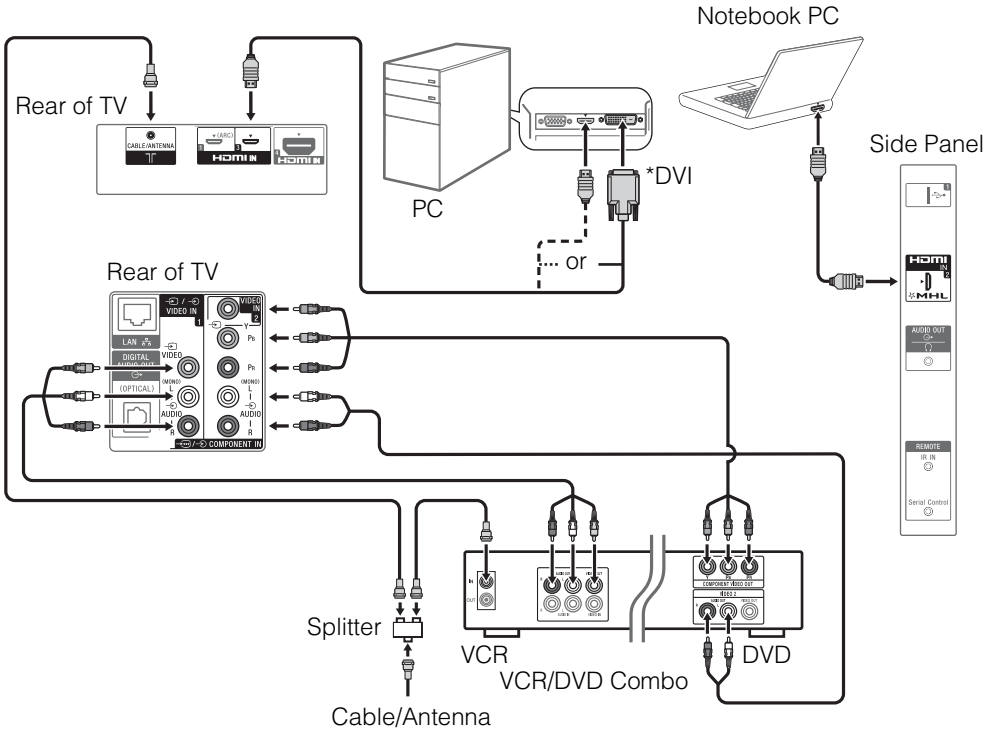

* DVI does not support audio signals. Connect the audio output of the PC to the PC speakers or an A/V receiver to listen to sound from the PC.

3: Securing the TV

Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling

- Secure the TV to a wall and/or stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on:
  - slippery, unstable and/or uneven surfaces.
  - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Route all AC power cords and connecting cables so that they are not accessible to curious children.

Recommended Measures to Secure the TV

Consider the following measures when securing your TV to a Stand (not supplied).

1 Secure the Stand for the TV.

Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the stand. For each angle brace use the appropriate hardware to:

- Attach one side of the angle brace to the wall stud.
- Attach the other side to the Stand.

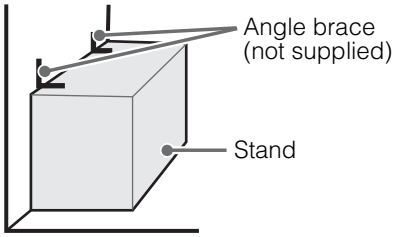

2 Secure the TV to the Stand.

Use the optional hardware listed as follows (not supplied):

- M4 machine screw (screwed into the TV's Table-Top Stand)
- A screw or similar (attach it to the Stand)
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

(Continued)

An alternative way to secure the TV is with an optional Sony Support Belt Kit. The Sony Support Belt Kit is available as an optional accessory, depending on your TV model.

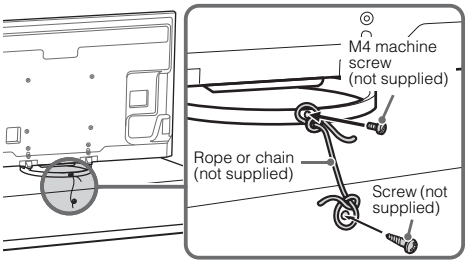

The length of the M4 machine screw differs depending on the rope or chain diameter. Please see below illustration.

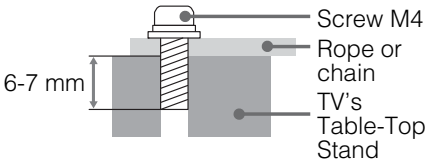

✍
Contact Sony Customer Support to obtain the optional Support Belt Kit by providing your TV model name.

- For United States call: 1-800-488-7669
- For Canada call: 1-877-899-7669

3 Anchor the TV to the Wall.

Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

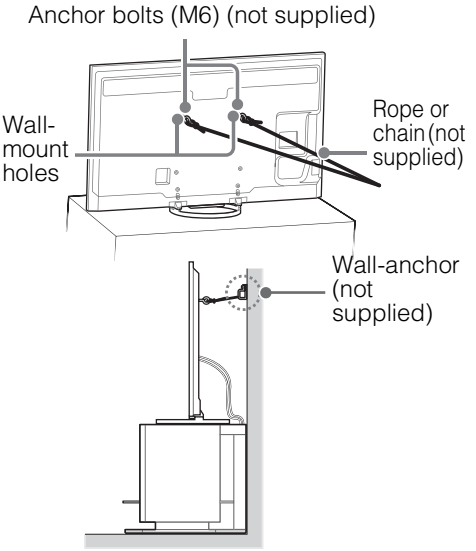

✍

- Your TV is shipped with screws attached to the rear of the TV depending on the TV model. (They are fastened in the screw holes for wall mounting.) Be sure to remove the upper two screws prior to anchoring the TV to a wall.
- Securing the TV to the stand without securing the TV and the stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

4: Bundling the cables

Before bundling the cables, remove the cable holder from the AC cover. Reuse the cable holder to bundle the other cables.

- Do not bundle the AC power cord together with other cables.

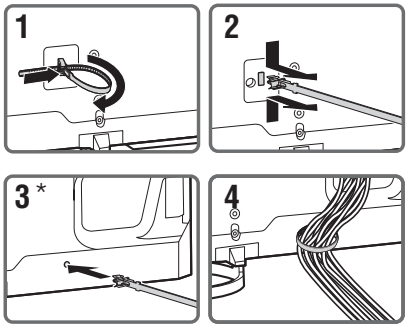

*** XBR-65X850A only**

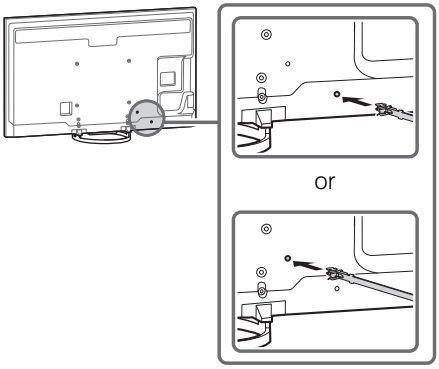

5: Connecting the TV to the Internet

When you connect this TV to the Internet, you can enjoy multiple functions. For details on the functions, refer to the i-Manual.

- You will need to contract with an Internet service provider to connect to the Internet.

Preparing a wired network

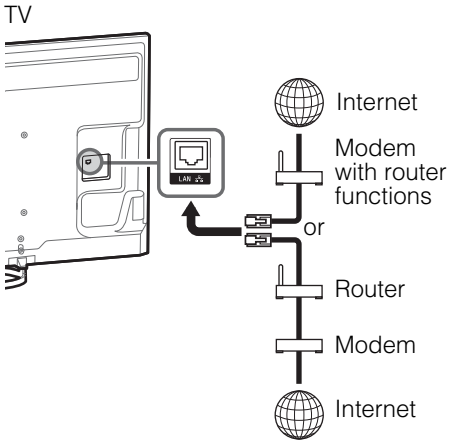

- For LAN connections, use a Category 7 cable (not supplied).

(Continued)

Preparing a wireless LAN

The built-in wireless LAN device allows you to access the Internet and your home network. With this feature, you can connect to a wireless LAN and enjoy the benefits of networking in a cable-free environment. Before setting up the wireless LAN function of the TV, be sure to set up a wireless LAN router.

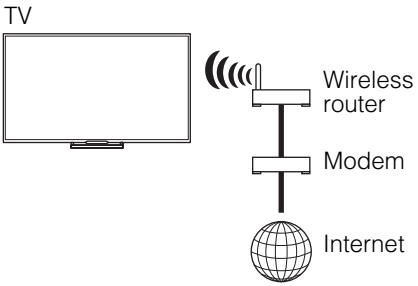

6: Running initial setup

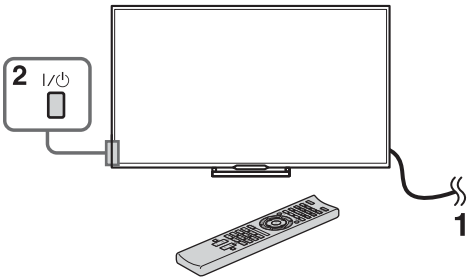

1 Complete your cable connections before proceeding with the **Initial Setup**. Connect the TV to your nearest power outlet.

2 Press **I**/⏻ on the TV. The illumination LED will light up in white.

When you switch on the TV for the first time, the Language menu appears on the screen.

✍

- When you turn on the TV for the first time, the TV requires some internal processing for optimization before you can perform the initial setup. There will be no picture and sound, and the illumination LED on the front of the TV blinks white for about 40 seconds. Do not turn off the TV during this process.
  This process has been completed at the factory for some TVs.
- The illumination LED lights up in different colors according to the status of the TV. If you do not wish to light up the illumination LED, you can turn it off later. Press **HOME**, then select **Settings → Preferences → Front Panel Illumination → Illumination LED → Off**. You can also press **OPTIONS**, then select **Illumination LED → Off**.



3 Press ↑/↓/←/→ to select an item, then press ⊕.
Follow the instructions on the screen.

✍
- **Home** mode sets the TV to settings optimized for home viewing.

4 Scan for available channels. If you receive channels from a cable box or satellite receiver and do not wish to use the TV's built-in tuner, select **Skip**.

5 Set up the Internet settings. If you do not access the Internet, or to set up later, select **Skip**. After you select **Continue** or **Start** (depending on model) at the Internet setup confirmation screen, select **Auto** to connect to the network automatically. Select **Custom** to connect manually.

✍
- If you use WEP security, select **Custom → Wireless Setup → Scan**. Then, select the network name (SSID) you want to connect. If you cannot find the required network name, select **[Manual Entry]** and press ⊕ to enter network name.
- To set **Network Setup** later, press **HOME**, then select **Settings → Network → Network Setup**.
- Use the optional USB Wireless LAN Adapter to connect with your wireless router (or access point) at 5GHz. Insert USB Wireless LAN Adapter and set **Wi-Fi Direct** to **Off**. Press **HOME**, then select **Settings → Network → Wi-Fi Direct → Off**.

Using a Wall-Mount Bracket

Your TV can be mounted on a wall using a Wall-Mount Bracket (not supplied) out of the box as packaged. If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see page 11 (Detaching the Table-Top Stand from the TV).
Prepare the TV for the Wall-Mount Bracket before making cable connections.

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The length of the screw for Wall-Mount Bracket differs depending on the mounting hook thickness. Please see below illustration.

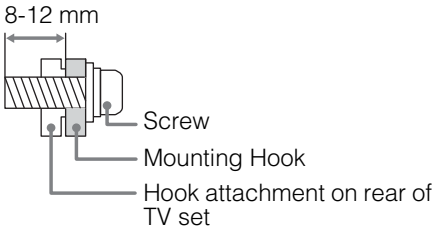

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

✍
- Read the supplied Safety Booklet for additional safety information.

Installing the TV against a wall or enclosed area

Make sure that your TV has adequate ventilation. Allow enough space around the TV as shown in the illustration.

Installed with stand

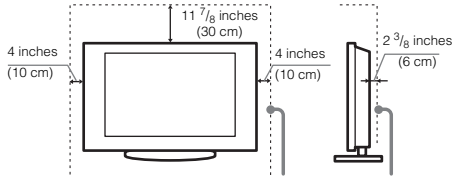

Leave at least this much space around the set.

Installed on the wall

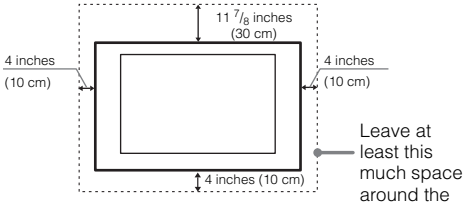

Never install the TV set as follows:

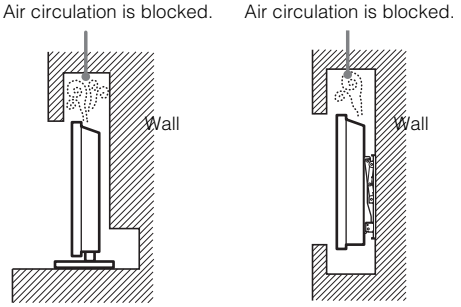

- Inadequate ventilation can lead to overheating of the TV and may cause damage to your TV or cause a fire.

Watching TV

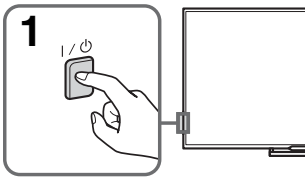

1 Turn on the TV.

Press I/⏻ on the TV or **POWER** on the remote control to turn on the TV.

2 Select a TV channel or select an input.

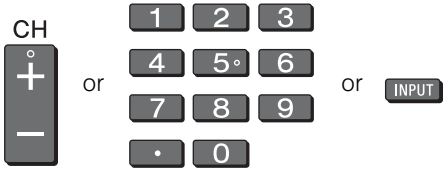

■ To select digital channels

Use **0-9** and • . For example, to enter channel 2.1:
Press 2 , • and 1 , then press ⊕.

✍
- See below illustration for location of the **CH+/-**, **+/-**, ↑/↓/←/→, ⏎, ⊞ and **HOME** buttons on the TV.

Rear of TV

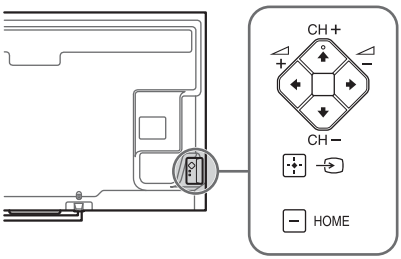

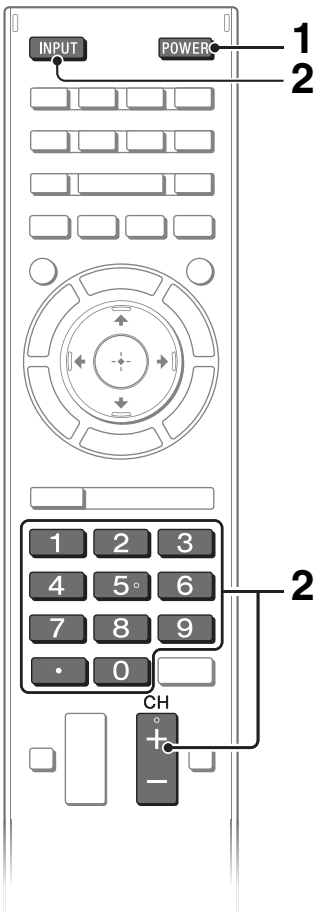

(Continued)

Watching 3D contents

This feature lets you experience powerful 3D entertainment, such as stereoscopic 3D games and 3D Blu-ray Disc. Refer to the i-Manual as well as the instruction manual supplied with the 3D Glasses on how to set the 3D settings or watch the 3D contents.

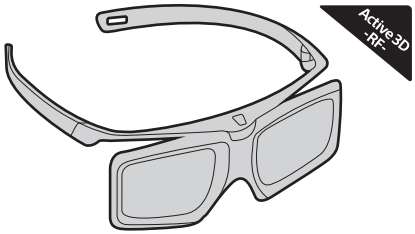

Frequently used buttons

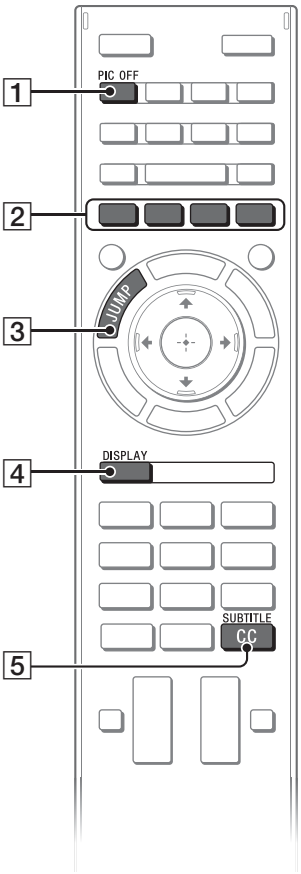

1 PIC OFF

Turns picture off, and sound remains on.

2 Color buttons

When the color buttons are available, an operation guide appears on the screen.

3 JUMP

You can jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.

4 DISPLAY

Displays channel number, details of programs, and the clock.

5 SUBTITLE/CC

You can turn closed captions/subtitles on/off.

Selecting various functions and settings (Home Menu)

You can select the features of your TV from the Home menu.

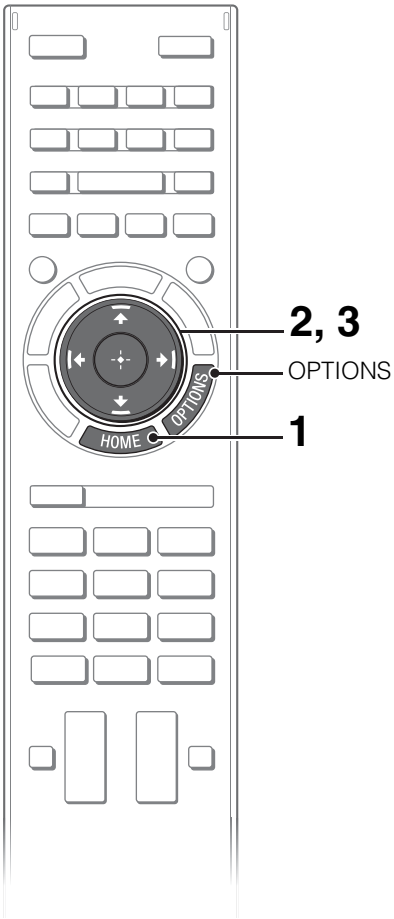

Here is an example on how to select an item and modify the TV settings.

1 Press HOME.

2 Press ↑/↓ to select Settings category.

The contents of **Settings** are displayed horizontally.

See page 26 (Category list) for all categories.

3 Press ←/→ to select a desired setting item, then press ⊕.

4 Modify the settings.

■ To exit the Home menu

Press **HOME**.

■ To select using the OPTIONS button

Press **OPTIONS**.
A list of convenient functions and menu shortcuts are displayed. The menu items vary based on the current input and/or content.

Category list

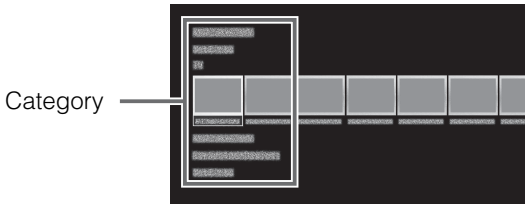

The categories are available depending on your TV model, region and country.

Featured	Provides information on available applications and content. If there is no network connection, or the **Featured Display** setting is set to **Off**, the **Featured** category will not be displayed.
History	Displays recently viewed items.
TV	Allows you to select a list of TV channels, or a program guide. Program guide is available depending on your TV model or region. A list of channels registered as favorites in the **TV** category are displayed.
Applications	Launches applications that require an Internet connection, including Media Player which does not require an Internet connection. A list of applications registered as favorites in the **Applications** category are displayed.
Connected Devices	Enables selection of devices connected to the TV.
Settings	Provides settings (e.g. picture settings, sound settings, key tone setting) that allow you to customize your TV.

Watching Internet Video

This feature serves as a gateway to Internet content, delivering a variety of on-demand entertainment straight to your TV. You can enjoy video content, including movies and cartoons. You will need to make a broadband Internet connection. For details, see page 19 (5: Connecting the TV to the Internet).

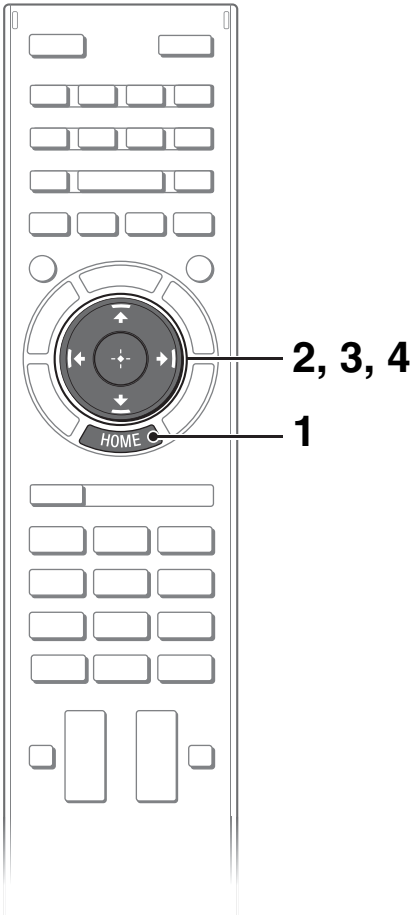

1 **Press HOME.**

2 **Press ↑/↓ to select Applications category.**

3 **Press ←/→ to select All Applications, then press ⊕.**

4 **Press ↑/↓/←/→ to select the desired service, then press ⊕.**

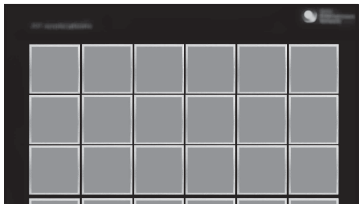

✍

- If you experience difficulties with this feature, check that the Internet connection is set up properly.
- The interface to Internet content depends on the Internet content providers.
- Services block video content based on the **Parental Lock** setting of the TV. Some service providers do not support this function.
- To update Internet Video content services, press **HOME**, then select **Settings** → **Network** → **Refresh Internet Content**.

Looking for instructions in the electronic manual (i-Manual)

Operating instructions are built into your BRAVIA TV and can be displayed on the screen. To learn more about your TV features, access your i-Manual with the touch of a button.

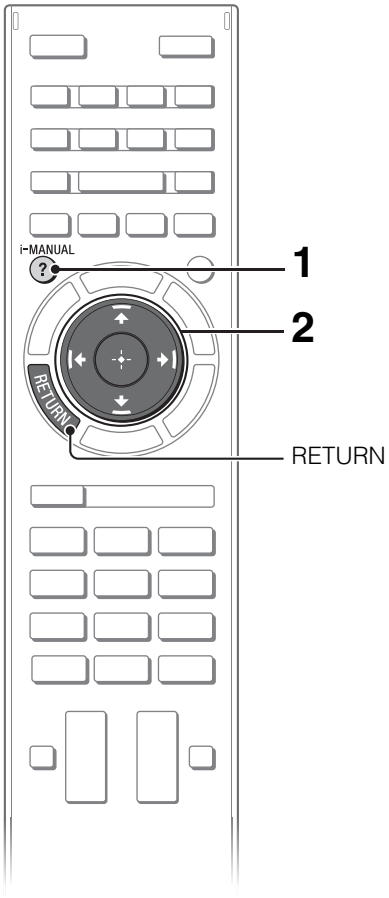

1 Press i-MANUAL.

i-MANUAL

2 Select an item.

❶ Press ←/→ to select an item.

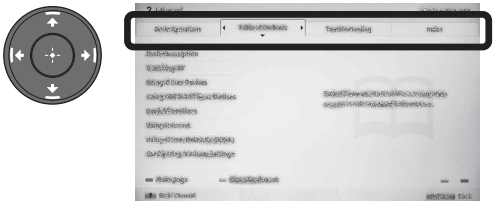

❷ Press ↑/↓/←/→ to select an item, then press ⊕.

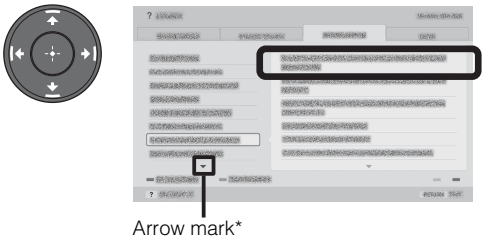

* If an arrow mark appears, press ↓ repeatedly to display more items.

The page of the selected item appears.

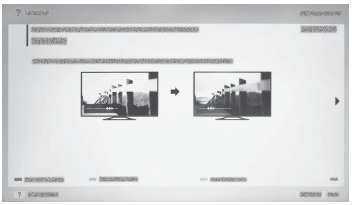

✍

- If your TV is connected to the Internet, you can check for latest FAQ (Frequently Asked Questions). Refer to “Troubleshooting” in the i-Manual, select “Frequently Asked Questions” and then follow the instructions on the screen. (Available in English and for United States only)
- You can step through pages using ←/→. Press **RETURN** to return to the previous page.

Saving frequently viewed pages (Bookmark)

You can save frequently viewed pages for easy access anytime.

■ To save a page

In the page to bookmark, press the red button on the remote control.

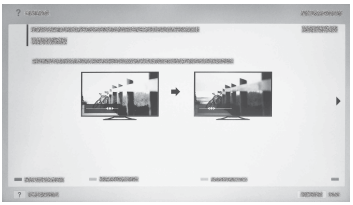

■ To access the bookmarked page

When displaying the i-Manual, press the blue button on the remote control to display the bookmark list. Press ↑/↓ to select the desired item, then press ⊕.

✍

- To return to the previous screen, press **RETURN**.

■ To remove a bookmark

When the bookmarked page is displayed, press the red button on the remote control.

Displaying the page again while operating the TV

You can switch between the i-Manual screen and the TV screen. This feature allows you to refer to the instructions in the i-Manual while using your BRAVIA TV. Press **i-MANUAL** to switch between the i-Manual screen previously displayed and the TV screen.

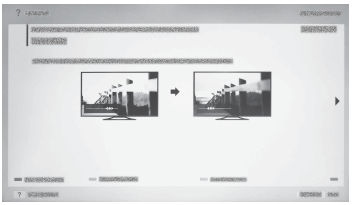

i-Manual screen previously displayed

i-MANUAL

BRAVIA TV screen

✍

- To jump to the top page of i-Manual, press the yellow button on the remote control. You can also press **HOME**, then select **Settings → i-Manual** to jump to the top page of i-Manual.
- Once you turn off the TV or the TV goes to standby mode, the i-Manual will be displayed from the top page when you select **i-Manual**.

Troubleshooting

When the illumination LED is flashing in red, count how many times it flashes (interval time is three seconds).

Press I/⏻ on the TV to turn it off, disconnect the AC power cord, and contact Sony Customer Support (information provided on the front cover) with how many times the indicator flashes.

When the illumination LED is not flashing, check the items in the table below.

Also refer to "Troubleshooting" in the i-Manual. If the problem persists, contact Sony Customer Support (information provided on the front cover).

Condition	Explanation/Solution
There is no picture (screen is dark) and no sound.	• Check the antenna/cable connection. • Connect the TV to the AC power, and press I/⏻ on the TV or **POWER** on the remote control.
Some programs cannot be tuned.	• Check the antenna.
The remote control does not function.	• Replace the batteries. • Your TV may be in SYNC mode. Press **SYNC MENU**, select **TV Control** and then select **Home (Menu)** or **Options** to control the TV.
The **Parental Lock** password has been forgotten.	• Enter 4357 for the PIN code. (PIN code 4357 is always accepted.)
The TV and its surrounding become warm.	• When the TV is used for an extended period of time, the TV and its surroundings may become warm to touch. This is not a malfunction of the TV.
How to reset the TV to factory settings	• Turn on the TV. While holding down ▲ on the remote control, press I/⏻ on the TV. (The TV will turn itself off, then back on again.) Release ▲. WARNING: The reset will clear all of your customized settings including the **Parental Lock** setting.
Frozen audio or video, a blank screen, or the TV does not respond to TV or remote control buttons.	• Perform a simple reset of the TV by unplugging the AC power cord for two minutes, then plug it in again.

✍

When viewing photo files in 4K resolution:

- The menu screen, operation guide or messages may not appear when displaying photos.
- To finish playback of photos, press **RETURN**, or switch the input by pressing INPUT.

How to care for your BRAVIA TV

Safety is very important. Please read and follow the safety documentation (Safety Booklet) separately provided.

Unplug the TV and other connected equipment from the wall outlet before you begin cleaning your TV.

- Wipe the LCD screen gently with a soft cloth.
- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- If using a chemically pretreated cloth, please follow the instruction provided on the package.
- Never spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts and enter the TV set, and may cause damage to the TV set.

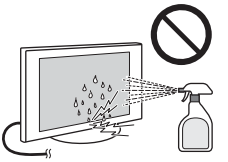

- Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- Do not plug in the TV into the wall outlet until the moisture from cleaning has evaporated.

The TV should also be placed on a stable surface to prevent it from toppling over (see page 17). If you have young children or pets at home, check regularly to ensure the TV is securely fastened.

Specifications

System	
Television system	NTSC: American TV standard ATSC (8VSB terrestrial): ATSC compliant 8VSB QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)
Channel coverage	Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69 Analog Cable: 1 - 135 / Digital Cable: 1 - 135
Panel system	LCD (Liquid Crystal Display) Panel
Speaker output	10W + 10W + 10W
Input/Output jacks	
CABLE/ANTENNA	75-ohm external terminal for RF inputs
/VIDEO IN 1	Video / Audio input (phono jacks)
/COMPONENT IN VIDEO IN 2	$Y P_B P_R$ (Component Video): 1080p (60 Hz), 1080i (60 Hz), 720p (60 Hz), 480p, 480i Audio input (phono jacks) Video input (common phono pin with Y input)
HDMI IN 1/2/3/4 (Support 4K resolution)	Video (2D): 4096 × 2160p (24 Hz), 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 60 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p, 480p, 480i, PC Formats Video (3D): Frame Packing 1080p (30 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p Side-by-Side 1080p (60 Hz), 1080/24p, 1080i (60 Hz), 720p (60 Hz) Over-Under 1080p (30, 60 Hz), 1080/24p, 1080i (60 Hz), 720p (60 Hz) Audio: Two channel linear PCM: 32, 44.1 and 48 kHz, 16, 20 and 24 bits, Dolby Digital ARC (Audio Return Channel) (HDMI IN 1 only)
MHL (common with HDMI IN 2)	Video (2D): 1080p (30 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p, 480p, 480i Video (3D): Side-by-Side 1080/24p, 1080i (60 Hz), 720p (60 Hz) Over-Under 1080p (30 Hz), 1080/24p, 1080i (60 Hz), 720p (60 Hz) Audio: Two channel linear PCM: 32, 44.1 and 48 kHz, 16, 20 and 24 bits, Dolby Digital
AUDIO OUT/Headphones	Stereo mini jack
DIGITAL AUDIO OUT (OPTICAL)	Digital optical jack (Two channel linear PCM, Dolby Digital)
LAN	10BASE-T/100BASE-TX connector (Connection speed may differ depending on the network environment. 10BASE-T/100BASE-TX communication rate and communication quality are not guaranteed for this TV.)
USB/DLNA	Refer to the i-Manual for supported formats.
REMOTE	RS232C, Serial Control mini jack; IR IN mini jack. These jacks are for receiving the external control signal.
Others	
Supplied accessories	See page 8 (Checking the accessories).
Optional accessories	Connecting cables Support Belt Kit Camera and Microphone Unit: CMU-BR200/CMU-BR100 USB Wireless LAN Adapter: UWA-BR100 Active 3D Glasses: TDG-BT500A
Operating temperature	32 °F – 104 °F (0 °C – 40 °C)

(Continued)

Model name XBR-		65X850A	55X850A
Power and others			
Power requirement		110-240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)	
Power consumption	in use	338 W	264 W
	in standby	0.2 W	
Screen size* (inches measured diagonally)		64.5 inches (65 class)	54.6 inches (55 class)
Display resolution		3,840 dots (horizontal) × 2,160 lines (vertical)	
Dimensions*	with stand (mm)	1,478 × 894 × 405	1,259 × 770 × 405
	with stand (inches)	58 $^{1}/_{4}$ × 35 $^{1}/_{4}$ × 16	49 $^{5}/_{8}$ × 30 $^{3}/_{8}$ × 16
	without stand (mm)	1,478 × 863 × 64	1,259 × 740 × 59
	without stand (inches)	58 $^{1}/_{4}$ × 34 × 2 $^{5}/_{8}$	49 $^{5}/_{8}$ × 29 $^{1}/_{4}$ × 2 $^{3}/_{8}$
	wall-mount hole pattern (mm)	400 × 300	300 × 300
	wall-mount hole pattern (inches)	15 $^{3}/_{4}$ × 11 $^{7}/_{8}$	11 $^{7}/_{8}$ × 11 $^{7}/_{8}$
	wall-mount screw size (mm)	M6 (length: see diagram on page 21.)	
Mass*	with stand (kg)/(lb.)	38.9 / 85.7	28.2 / 62.2
	without stand (kg)/(lb.)	37.5 / 82.6	26.8 / 59.1

* Screen size, dimensions and mass are approximate values.

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.

Safety Information

Declaration of Conformity

Trade Name: SONY
Model: XBR-65X850A/XBR-55X850A
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo,
San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Related Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient or relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Safety and Regulatory

This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

This device and its antenna(s) must not be co-located or operating with any other antenna or transmitter except Grant condition.

Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

For Your Convenience	
Online Registration:	Be sure to register your TV. **United States** http://productregistration.sony.com **Canada** http://www.sony.ca/registration
Software Updates:	Your TV is capable of receiving software updates. For the latest information about software updates for your TV, visit: **United States** http://www.sony.com/tvsupport **Canada** http://www.sony.ca/support NOTE: If your TV is connected to the Internet, you can check for software updates by selecting **Settings**, **Product Support** and then **Software Update**.

http://www.sony.net/

© 2013 Sony Corporation Printed in Mexico

SONY

4-476-541-**11**(1)

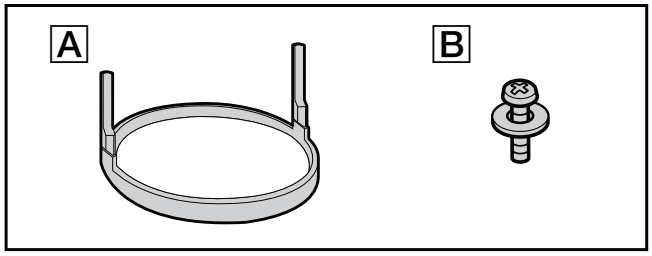

1

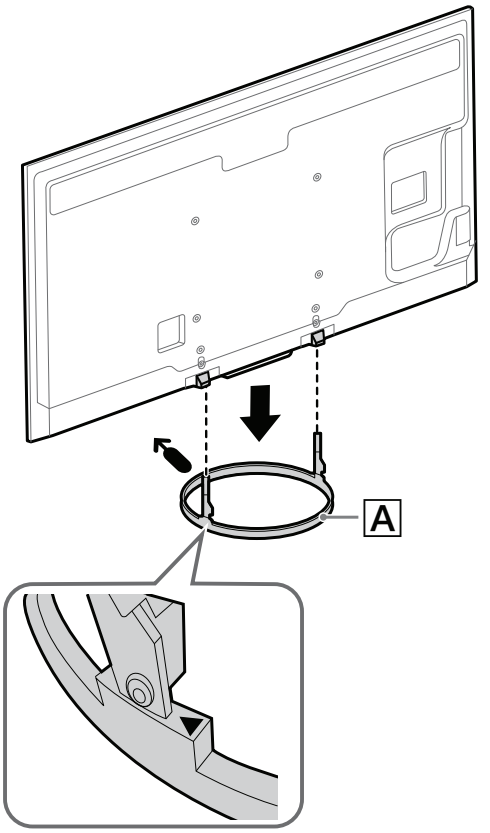

1.5 N•m/1,5 N•m
{15 kgf•cm}



2

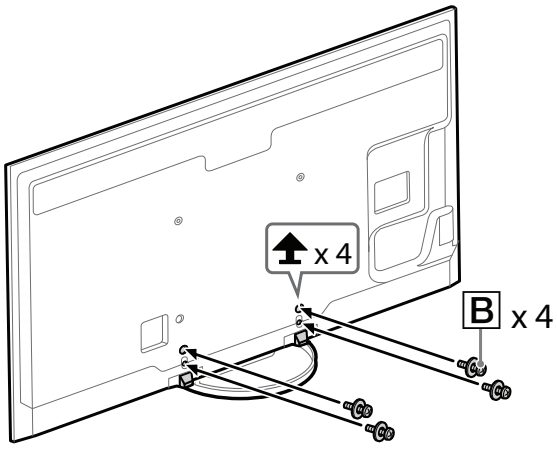

© 2013 Sony Corporation

SONY

Active 3D Glasses

Instructions	US
Mode d'emploi	FR
Manual de instrucciones	ES

Lea este manual antes de usar el producto

4 4 4 8 5 5 4 1 1

http://www.sony.net/
4-448-554-**11**(2)
Printed in Mexico
© 2013 Sony Corporation

TDG-BT500A / BT400A

English

Active 3D Glasses

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC/INDUSTRY CANADA NOTICE

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.
This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

FCC CAUTION

Changes or modifications not expressly approved by HOSIDEN responsible for compliance could void the user's authority to operate the equipment.

For the State of California, USA only
Perchlorate Material – special handling may apply, See
www.dtsc.ca.gov/hazardouswaste/perchlorate
Perchlorate Material: Lithium battery contains perchlorate.

WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD
The Active 3D Glasses supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Caution

Please read these safety instructions to ensure your personal safety and prevent property damage.
Danger of explosion if battery is incorrectly replaced. Observe the correct polarity when inserting the battery.
Use only CR2025 type battery.
This device and its antenna(s) must not be collocated or operating with any other antenna or transmitter except Grant condition.

Owner's Record

The model and serial numbers are located on the product. Record these numbers in the spaces provided below.
Refer to them whenever you call upon your Sony dealer regarding this product.

Model Name

Serial No.

FCC Related Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
☐ Reorient or relocate the receiving antenna.
☐ Increase the separation between the equipment and receiver.
☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
☐ Consult the dealer or an experienced radio / TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

For Customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

Warning

- Do not put the Active 3D Glasses in a fire.
- Do not disassemble the Active 3D Glasses.
- Do not use, charge, store, or leave the Active 3D Glasses near a fire, or in places with a high temperature, e.g., in direct sunlight, or in sun-heated cars.
- Do not allow water or foreign material to enter the Active 3D Glasses.
- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Precautions for use

- The Active 3D Glasses are operated by receiving RF signals from the TV.
- Mis-operation may occur if:
  - The Active 3D Glasses do not face the TV
  - If there are objects blocking the path between the Active 3D Glasses and the TV
  - If there are other 2.4GHz RF communication devices such as an Internet AP or microwave oven, etc. nearby, this may affect their performance.
- Watch the TV using the Active 3D Glasses, facing squarely towards the TV.
- 3D effect is inadequate and screen colour will shift when lying down or tilting your head.

Safety Precautions

- You should only use this product for watching 3D video images on a compatible Sony television.
- Some people may experience discomfort (such as eye strain, fatigue, or nausea) when using this product. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop using this product and watching the 3D video images until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual of your television, as well as any other device or media used with your television and (ii) Sony website for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above.
- Do not drop or modify the Active 3D Glasses.
- If the Active 3D Glasses are broken, keep broken pieces away from your mouth or eyes.
- Be careful not to pinch your fingers in the hinges when bending the temple arms.
- Keep this product out of reach of children, so that they are not mistakenly swallowed.
- Watch the TV from a distance of more than three times the TV's screen height.
- Be careful not to harm the eyes with the glasses' temple when wearing the Active 3D Glasses.
- Flickering or flashing under some fluorescent or LED lighting, etc.
  - When you use the Active 3D Glasses and watch or play 3D video images or SimulView™ contents under some fluorescent or LED lighting, etc., flickering or flashing lights may be observed. This flickering or flashing may trigger epileptic seizures or blackouts (photosensitivity) in a very small percentage of individuals. If you observe such flickering or flashing, IMMEDIATELY take off the Active 3D Glasses and stop watching or playing the 3D video images or SimulView™ contents. This flickering or flashing may trigger previously undetected epileptic symptoms or seizures in persons who have no history of prior seizures or epilepsy. If you have an epileptic condition or have had seizures of any kind, consult your doctor before watching or playing the 3D video images or SimulView™ contents. If you experience any of the following health symptoms while using the Active 3D Glasses, IMMEDIATELY take off the Active 3D Glasses and stop watching or playing the 3D video images or SimulView™ contents and consult your doctor before resuming: dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, seizures, or any involuntary movement or convulsion.

Maintenance of your Glasses

- Wipe the Glasses gently with a soft cloth.
- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- If using a chemically pretreated cloth, be sure to follow the instructions provided on the package.
- Never use strong solvents such as a thinner, alcohol or benzine for cleaning.

Overview

Active 3D Glasses needs registration to TV.
When using Active 3D Glasses with another TV, re-registration is necessary.

Steps

1 Remove the battery's insulating sheet before using the product for the first time.

2 When using Active 3D Glasses for the first time, hold the glasses within a 50 cm range of the TV and turn on the TV and hold the ⏻ (Power) button/indicator for 2 seconds. The Active 3D Glasses turn on and registration starts (The ⏻ (Power) button/ indicator blinks green and yellow). When registration is finished, a message appears in the bottom right of the screen for 5 seconds, and the indicator will light up green for 3 seconds. This process is only required one time.
If registration fails, the Active 3D Glasses will turn off automatically. In this case, repeat the above.

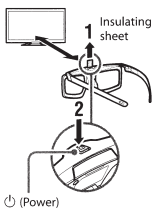

To turn on and off

To turn on : Press once the power button.
To turn off : Hold the power button down for 2 seconds.

Additional Information

Troubleshooting

In the event of a problem, refer to i-Manual on your TV.
Refer to Sony website for the latest information.

For United States www.sony.com/tvsupport
For Canada www.sony.ca/support

Specifications

Battery type
CR2025 Lithium Manganese Dioxide Battery
Operating time (Approx.)
100 hours

Design and specifications are subject to change without notice.

Trademark Information

- "SimulView" is a trademark of Sony Computer Entertainment Inc.

Français

Lunettes 3D actives

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition dans le Supplément C à OET65 et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation du débit d'absorption spécifique (DAS).

Pour l'État de la Californie, les États-Unis seulement.
Matériau perchlorate – une manipulation spécifique est peut-être nécessaire, Consulter www.dtsc.ca.gov/hazardouswaste/perchlorate
Matériau perchlorate : La pile au lithium contient du perchlorate.

AVERTISSEMENT

NE PAS AVALER LA PILE, RISQUE DE BRÛLURE CHIMIQUE
Les lunettes 3D Actives fournies avec ce produit contiennent une pile en forme de pièce de monnaie/ bouton. Si la pile en forme de pièce de monnaie/ bouton est avalée, elle pourra provoquer des brûlures internes graves en seulement 2 heures et entraîner la mort. Garder les piles neuves et usées hors de la portée des enfants. Si le compartiment de la pile ne se ferme pas correctement, arrêter l'utilisation du produit et le conserver hors de la portée des enfants.
Si les piles ont pu être avalées ou insérées à l'intérieur d'une partie du corps, consulter immédiatement un médecin.
1) Lisez les directives suivantes.
2) Conservez ces directives.
3) Observez et respectez tous les avertissements.
4) Suivez toutes les directives.
5) N'utilisez pas cet appareil près de l'eau.
6) Nettoyez cet appareil uniquement avec un chiffon sec.
7) N'installez pas l'appareil à proximité d'une source de chaleur telle qu'un radiateur, une bouche d'air chaud, une cuisinière ou tout autre appareil (y compris des amplificateurs) émettant de la chaleur.
8) Pour toute réparation, adressez-vous à un réparateur qualifié. Faites réparer l'appareil s'il a été endommagé de quelque manière que ce soit, par exemple si le cordon d'alimentation ou sa fiche sont endommagés, si du liquide ou tout autre corps étranger a pénétré dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.

Attention

Veuillez lire ces mesures de sécurité afin de garantir votre sécurité personnelle et d'éviter toute perte matérielle.
Risque d'explosion si la pile n'est pas remplacée correctement.
Respecter la polarité correcte lors de l'insertion de la pile.
Utiliser seulement une pile de type CR2025.
Cet appareil et sa ou ses antennes ne doivent pas être placés à proximité d'autres antennes ou émetteurs ni fonctionner avec eux, sauf autorisation spéciale.

Fiche d'identification

Les références du modèle et les numéros de série figurent sur le produit. Inscrivez ces numéros dans les espaces ci-dessous.
S'y reporter lors de toute consultation avec le détaillant Sony au sujet de ce produit.

N° de modèle

N° de série

AVIS

Cet appareil a été soumis à l'essai et s'est avéré conforme aux limites pour un appareil numérique de classe B, conformément à la section 15 des règlements de la FCC. Ces normes sont conçues pour assurer une protection raisonnable contre les interférences nuisibles dans un environnement résidentiel. Cet appareil génère, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé ou utilisé selon les directives, peut causer des interférences nuisibles aux communications radio. Cependant, il n'existe aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si ce matériel est source d'interférences nuisibles pour la réception radio ou télévisée, ce qui peut être déterminé en mettant l'appareil hors tension, puis sous tension, il est recommandé de tenter d'éliminer ces interférences en appliquant l'une ou plusieurs des mesures suivantes :
☐ Réorienter ou déplacer l'antenne réceptrice.
☐ Augmenter l'espace entre l'appareil et le récepteur.
☐ Brancher l'appareil dans une prise d'un circuit différent de celui qui alimente le récepteur.
☐ Consulter le détaillant ou un technicien radio/ télévision qualifié pour obtenir de l'aide.

Conformément aux règlements de la FCC, vous êtes averti que tous les changements ou modifications non expressément approuvés dans ce manuel pourraient annuler tous vos droits relatifs à l'utilisation de ce produit.

Pour les clients résidant au Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Avertissement

- Ne pas mettre les lunettes 3D actives au feu.
- Ne pas démonter les lunettes 3D actives.
- Ne pas utiliser, charger, stocker ou laisser les lunettes 3D actives près d'un feu, ou dans des endroits à haute température, par exemple soit à la lumière directe du soleil ou dans des véhicules stationnés au soleil.
- Ne pas laisser de l'eau ou un corps étranger pénétrer dans les lunettes 3D actives.
- Les piles ne doivent pas être exposées à une chaleur excessive telle que le soleil, le feu ou similaire.

Précautions d'utilisation

- Les lunettes 3D actives fonctionnent en recevant des signaux RF du téléviseur.
- Des problèmes de fonctionnement peuvent survenir si:
  - Les lunettes 3D actives ne sont pas placées face au téléviseur
  - Si des objets bloquent la communication entre les lunettes 3D actives et le téléviseur
  - La présence d'autres appareils de communication RF 2,4GHz RF tels qu'un routeur Internet AP ou un four à micro-ondes etc. à proximité, pourrait affecter leur fonctionnement.
- Regarder le téléviseur en utilisant les lunettes 3D actives, en faisant face directement au téléviseur.
- Lors d'une utilisation en position couchée ou avec la tête penchée, l'effet 3D est inadéquat et la couleur est décalée par rapport à l'écran.

Consignes de sécurité

- Utiliser ce produit uniquement pour visionner des images vidéo en 3D sur l'écran d'un téléviseur Sony compatible.
- Certaines personnes peuvent ressentir de l'inconfort (tel que de la fatigue oculaire, fatigue ou nausée) lors de l'utilisation de ce produit. Sony recommande à tous les utilisateurs de prendre régulièrement des pauses pendant le visionnement d'images vidéo 3D ou les parties de jeux en 3D stéréoscopique. La durée et la fréquence des pauses nécessaires varient d'une personne à l'autre. C'est à vous de décider ce qui vous convient le mieux. En cas d'inconfort, cesser d'utiliser ce produit et de visionner des images vidéo 3D jusqu'à ce que les symptômes disparaissent ; Consulter un médecin en cas de besoin. Consulter également (i) le mode d'emploi du téléviseur, ainsi que de tout autre appareil ou support média utilisé avec le téléviseur et (ii) le site web de Sony pour obtenir les renseignements les plus à jour. La vision des jeunes enfants (en particulier ceux de moins de 6 ans) est en plein développement. Consultez votre médecin (tel qu'un pédiatre ou ophtalmologiste) avant de permettre aux jeunes enfants de visionner des images vidéo 3D ou jouer à des jeux en 3D stéréoscopique. Les adultes doivent surveiller les jeunes enfants pour s'assurer qu'ils suivent les recommandations ci-dessus.
- Veiller à ne pas laisser tomber ni modifier ces lunettes 3D actives.
- Si les lunettes 3D actives se cassent, conserver les pièces brisées loin de la bouche et des yeux.
- Veiller à ne pas se pincer les doigts dans les pentures lorsque les branches des lunettes sont repliées.
- Garder ce produit hors de la portée des enfants, pour qu'il ne fasse pas l'objet d'ingestion par accident.
- Regarder le téléviseur à une distance trois fois supérieure à la hauteur de l'écran du téléviseur.
- Faire attention à ne pas se blesser les yeux avec les branches des lunettes lors du port des lunettes 3D actives.
- Un vacillement ou clignotement peut se présenter sous certains éclairages fluorescents ou à DEL, etc.
  - Lorsque vous utilisez des lunettes 3D actives et visionnez ou jouez avec des images vidéo en 3D ou des contenus SimulView™ sous certains éclairages fluorescents, à DEL, etc., des lumières vacillantes ou clignotantes pourraient être observées. Ce vacillement ou clignotement pourrait déclencher des crises d'épilepsie ou des pertes de conscience (photosensibilité) chez un infime pourcentage d'individus. Si vous observez ce vacillement ou clignotement, enlevez IMMÉDIATEMENT les lunettes 3D actives et arrêtez de visionner ou de jouer avec les images vidéo en 3D ou les contenus SimulView™. Ce vacillement ou clignotement pourrait déclencher des symptômes ou crises d'épilepsie non diagnostiqués jusque-là chez des personnes ne présentant pas d'antécédents de crises d'épilepsie. Si vous êtes atteint(e) de crises d'épilepsie ou d'autres crises, veuillez consulter votre médecin avant de visionner ou de jouer avec des images vidéo en 3D ou des contenus SimulView™. Si vous êtes atteint(e) d'un des symptômes suivants lorsque vous utilisez les lunettes 3D actives, enlevez IMMÉDIATEMENT les lunettes 3D actives et arrêtez de visionner ou de jouer avec les images vidéo en 3D ou les contenus SimulView™ et consultez votre médecin avant de continuer : étourdissement, vision altérée, spasmes musculaires ou clignements des yeux, perte de conscience, désorientation, crises, ou tout mouvement involontaire ou toute convulsion.

Entretien des lunettes

- Essuyer les lunettes délicatement à l'aide d'un chiffon doux.
- Les taches tenaces peuvent être enlevées à l'aide d'un chiffon légèrement imbibé d'une solution de savon doux et d'eau tiède.
- En cas d'utilisation d'un chiffon prétraité avec un produit chimique, s'assurer de bien suivre les directives indiquées sur l'emballage.
- N'utilisez jamais de solvants corrosifs tels qu'un diluant, de l'alcool ou du benzène pour nettoyer l'appareil.

Vue d'ensemble

Les lunettes 3D actives doivent être enregistrées par le téléviseur.
Lors de l'utilisation des lunettes 3D actives avec un autre téléviseur, il est nécessaire d'effectuer l'enregistrement à nouveau.

Étapes

1 Retirer la feuille de protection de la pile avant d'utiliser le produit pour la première fois.

2 Lors de la première utilisation des lunettes 3D actives, tenir les lunettes à 50 cm du téléviseur, allumer le téléviseur et maintenir enfoncé(e) l'indicateur / la touche (alimentation) ⏻ pendant 2 secondes. Les lunettes 3D actives sont en marche et l'enregistrement démarre (l'indicateur/ la touche (alimentation) ⏻ clignote en vert et jaune). Une fois l'enregistrement terminé, un message s'affiche dans la partie inférieure droite de l'écran pendant 5 secondes, et l'indicateur s'allumera en vert pendant 3 secondes. Ce processus est demandé une seule fois. Si l'enregistrement échoue, les lunettes 3D actives s'éteindront automatiquement. Dans ce cas, répéter les étapes ci-dessus.

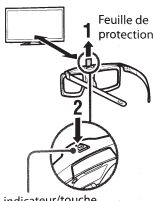

Pour allumer et éteindre

Pour allumer : Appuyez une fois sur la touche d'alimentation.
Pour éteindre : Maintenez la touche d'alimentation enfoncée pendant 2 secondes.

Information complémentaire

Dépannage

En cas de problème, consulter i-Manual sur le téléviseur.
Consulter le site web de Sony pour obtenir les renseignements les plus à jour.

Pour les États-Unis www.sony.com/tvsupport
Pour le Canada www.sony.ca/support

Caractéristiques techniques

Type de pile

Pile Lithium CR2025 à base de dioxyde de manganèse

Durée de fonctionnement (approximatives)

100 heures

La conception des produits et les caractéristiques techniques peuvent changer sans préavis.

Informations de marque déposée

- « SimulView » est une marque déposée de Sony Computer Entertainment Inc.

Español

Anteojos 3D activos

Anteojos 3D activos, TDG-BT400A,
TDG-BT500A, SONY
Sony de México S.A. de C.V.
HENRY FORD NO. 29 FRACC. IND. SN. NICOLAS,
TLALNEPANTLA, EDO. DE
+52 55 3067 1243 MÉXICO C.P. 54030
Hecho en China
CR2025 / 3V

ID DE COFETEL: RCPHOAR12-1093
Sony Corporation
ARC0503
El módulo ARC0503 está instalado en TDG-BT400A y TDG-BT500A.

AVISO IMPORTANTE PARA COFETEL

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada. Para consultar la información relacionada al número del certificado de COFETEL, refiérase a la etiqueta del empaque y/o del producto.

Este dispositivo cumple con la Sección 15 del reglamento de la FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) Este dispositivo no debe provocar interferencias perjudiciales y (2) este dispositivo debe aceptar las interferencias recibidas, incluidas las que puedan provocar un funcionamiento no deseado.

AVISO DE LA FCC/INDUSTRIA CANADIENSE

Este dispositivo cumple con la Parte 15 de las normas de la FCC y con los estándares RSS que no exigen licencia de la Industria Canadiense. El funcionamiento está sujeto a las dos condiciones siguientes: (1) este dispositivo no debe provocar interferencias y (2) este dispositivo debe aceptar las interferencias recibidas, incluidas las que puedan provocar un funcionamiento no deseado.
Este equipo cumple con los límites de exposición de radiación de la FCC/IC establecidos para un ambiente no controlado y cumple con los lineamientos de exposición de radiofrecuencia (RF) de la FCC estipulados en el Suplemento C a OET65 y RSS-102 del reglamento de exposición de radiofrecuencia (RF) de la IC. Este equipo tiene niveles muy bajos de energía de RF que se considera cumplen sin que se requiera una evaluación de la tasa de absorción específica (SAR).

PRECAUCIÓN DE LA FCC

Los cambios o modificaciones que no estén aprobados expresamente por HOSIDEN, responsable del cumplimiento, podrían anular la autorización del usuario para operar el equipo.

Solo para el Estado de California, EE.UU.
Material de perclorato – es posible que requiera manejo especial, Consulte
www.dtsc.ca.gov/hazardouswaste/perchlorate
Material de perclorato: La batería de litio contiene perclorato.

⚠ ADVERTENCIA

NO INGIERA LA BATERÍA, PELIGRO DE QUEMADURA QUÍMICA
Las gafas 3D activas suministradas con este producto contienen una batería tipo moneda/botón. Si se ingiere la batería tipo moneda/botón, puede ocasionar quemaduras internas graves en tan sólo 2 horas y puede provocar la muerte. Mantenga la batería nuevas y usadas fuera del alcance de los niños. Si el compartimiento de la batería no cierra correctamente, ya no utilice el producto y manténgalo fuera del alcance de los niños.
Si piensa que las baterías han sido ingeridas o que se colocaron en alguna parte interna del cuerpo, busque atención médica de inmediato.
1) Lea estas instrucciones.
2) Guarde estas instrucciones.
3) Respete todas las advertencias.
4) Siga todas las instrucciones.
5) No utilice este aparato cerca del agua.
6) Límpielo únicamente con un paño seco.
7) No lo instale cerca de fuentes de calor como radiadores, calefactores, hornos u otros aparatos (incluidos los amplificadores) que generen calor.
8) Solicite servicio técnico únicamente a personal de servicio técnico especializado. Será necesario solicitar servicio técnico si el aparato ha sufrido daños como, por ejemplo, si el cable de alimentación o el enchufe están dañados, se ha vertido líquido o se ha caído algún objeto dentro del aparato, o bien si dicho aparato ha sido expuesto a la lluvia o a humedad, no funciona correctamente o se ha caído.

Precaución

Por favor lea estas instrucciones de seguridad para garantizar su seguridad personal y evitar daños a la propiedad.
Existe peligro de explosión si la batería se reemplaza incorrectamente.
Observe la polaridad correcta cuando inserte la batería.
Utilice sólo una batería tipo CR2025.
Este equipo opera a titulo secundario, consecuentemente, debe aceptar interferencias perjudiciales incluyendo equipos de la misma clase y puede no causar interferencias a sistemas operando a titulo primario.

Registro de propiedad

Los números de modelo y serie están ubicados en el producto. Anote estos números en los espacios que se proporcionan a continuación. Consúltelos cuando contacte con su distribuidor Sony acerca de este producto.

Nombre de modelo

_____

N° de serie

_____

Información relacionada a la FCC

Este aparato fue debidamente probado, demostrándose que cumple con los límites establecidos para los dispositivos digitales Clase B de acuerdo con la Sección 15 de las normas de la FCC. Estos límites se establecieron para ofrecer protección razonable contra interferencias perjudiciales en las instalaciones residenciales. Este aparato genera, usa y puede emitir energía de frecuencia radioeléctrica, y si no se instala y utiliza de acuerdo con las instrucciones correspondientes, podría producir interferencias perjudiciales en las radiocomunicaciones.
No obstante, no puede garantizarse que no se produzcan estas interferencias en una instalación determinada. Si este aparato llega a interferir en la recepción de radio o televisión, lo que podrá comprobarse encendiendo y apagando el aparato, se recomienda al usuario intentar corregir la interferencia mediante una o más de las siguientes medidas:
☐ Cambiar la orientación o la ubicación de la antena de recepción.
☐ Aumentar la distancia entre el equipo y el receptor.
☐ Conectar el equipo a un tomacorriente de un circuito distinto al que está enchufado el receptor.
☐ Ponerse en contacto con el distribuidor o solicitar los servicios de un técnico capacitado en radio y TV.

De acuerdo con las regulaciones de la FCC, se le advierte que cualquier cambio o modificación que no se apruebe expresamente en este manual podría anular su autorización para operar este equipo.

Para los clientes de Canadá

Este aparato digital Clase B cumple con el estándar ICES-003 (Interference-Causing Equipment Standard) de Canadá.

Referencia de funciones y traducciones

En este manual se incluyen ciertos términos en inglés. A continuación encontrará su traducción y explicación.

Texto en el manual	Español	Explicación
3D	Tridimensional	
LED	Emisor de Luz	
Internet	Red Mundial de Información	

Advertencia

- No ponga anteojos 3D activos en el fuego.
- No desensamble las anteojos 3D activos.
- No use, cargue, guarde ni deje las anteojos 3D activos cerca del fuego o en lugares con temperaturas elevadas, por ejemplo, superficies o autos expuestos a la luz solar directa.
- No permita que entre agua ni materiales extraños en la anteojos 3D activos.
- Las baterías no se deben exponer a calor excesivo como la luz del sol, fuego o algo semejante.

Precauciones para el uso

- Las anteojos 3D activos funcionan mediante la recepción de señales de RF del TV.
- Su funcionamiento puede fallar en los siguientes casos:
  - Las anteojos 3D activos no se posicionan frente al TV
  - Si hay objetos que obstaculizan el trayecto entre las anteojos 3D activos y el TV
  - Si hay otros dispositivos de comunicación de RF de 2,4Hz cerca, como un AP del internet u horno de microondas, etc.
- Cuando vea el TV con las anteojos 3D activos, ubíquese justo frente al TV.
- El efecto 3D no se percibirá adecuadamente y se modificará el color de la pantalla si se acuesta o inclina la cabeza.

Precauciones de seguridad

- Utilice este producto sólo para ver imágenes de video en 3D en un televisor Sony compatible.
- Algunas personas pueden experimentar molestias (como cansancio visual, fatiga o náuseas) al utilizar este producto. Sony recomienda que los usuarios descansen regularmente al ver videos 3D o al jugar con juegos 3D estereoscópicos. La duración y la frecuencia de los descansos necesarios varían según cada persona. Usted debe decidir lo que mejor funciona en su caso. Si experimenta alguna molestia, suspenda el uso de este producto y no vea imágenes de video en 3D hasta que las molestias desaparezcan. Consulte a su médico si lo considera necesario. También se recomienda leer nuevamente (i) el manual de instrucciones de su televisión, así como también instructivos de cualquier otro dispositivo o medio que se utilice con su televisión y (ii) el sitio web de Sony para obtener la última información. La vista de los niños pequeños (en especial los menores de seis años) todavía está en desarrollo. Consulte con su médico (a un pediatra o a un oftalmólogo) antes de permitir que niños pequeños vean imágenes de video 3D o jueguen juegos 3D estereoscópicos. Los adultos deben supervisar a los niños pequeños para asegurarse de que sigan las recomendaciones anteriores.
- No modifique las anteojos 3D activos ni permita que se caigan.
- Si los anteojos 3D activos se rompen, mantenga los pedazos rotos alejados de su boca y ojos.
- Tenga cuidado de no pellizcarse los dedos en las bisagras cuando pliegue las patillas.
- Mantenga este producto fuera del alcance de los niños para evitar que se ingiera accidentalmente.
- Vea el TV desde una distancia mayor a tres veces la altura de la pantalla del TV.
- Cuando use las anteojos 3D activos tenga cuidado de no lesionar los ojos con las patillas de las gafas.
- Parpadeos o destellos pueden ocurrir bajo ciertas condiciones de iluminación.
  - Cuando use los anteojos 3D activos y vea o reproduzca imágenes de video en 3D o contenido SimulView™ en ciertas condiciones de iluminación fluorescente o LED, etc., es posible que se observen luces parpadeando o destellando. Este parpadeo o destello puede provocar ataques epilépticos o desmayos (fotosensibilidad) en un porcentaje muy reducido de personas. Si observa dicho parpadeo o destello, INMEDIATAMENTE quítese las anteojos 3D activos y deje de ver o reproducir las imágenes de video en 3D o el contenido SimulView™. Este parpadeo o destello puede provocar síntomas epilépticos o ataques no detectados previamente en personas que no tienen antecedentes de ataques o epilepsia. Si tiene una condición epiléptica o ha tenido ataques de cualquier tipo, consulte a su médico antes de ver o reproducir las imágenes de video en 3D o el contenido SimulView™. Si experimenta síntomas como mareo, visión alterada, espasmos oculares o musculares, pérdida de consciencia, desorientación, ataque epiléptico o cualquier movimiento involuntario o convulsion mientras usa los anteojos 3D activos, INMEDIATAMENTE quítese las anteojos 3D activos y deje de ver o reproducir las imágenes de video en 3D o contenido SimulView™ y consulte a su médico antes de reanudar.

Mantenimiento de sus gafas

- Limpie las gafas cuidadosamente con un paño suave.
- Las manchas difíciles se pueden eliminar con un paño humedecido en agua tibia y jabón suave.
- Si utiliza un paño previamente tratado con productos químicos, asegúrese de seguir las instrucciones proporcionadas en el envase.
- Nunca utilice solventes fuertes como diluyentes de pintura, alcohol o bencina su limpieza.

Información general

Es necesario registrar las anteojos 3D activos con el TV.
Si utiliza las anteojos 3D activos con otro TV, será necesario volverlas a registrar.

Pasos

1 Antes de usar el producto por primera vez quite el recubrimiento aislante de la batería.

2 Cuando utilice las anteojos 3D activos por primera vez, mantenga las gafas dentro de un rango de 50 cm del TV, encienda el TV y mantenga presionado el botón/indicador ⏻ (encendido) durante 2 segundos. Las anteojos 3D activos se encienden e inicia el registro (el botón/indicador ⏻ (encendido) parpadea en verde y amarillo. Cuando se termina el registro, aparecerá un mensaje en la parte inferior derecha de la pantalla durante 5 segundos y el indicador se iluminará en verde durante 3 segundos. Sólo es necesario realizar este proceso una vez. Si el registro falla, las anteojos 3D activos se apagarán automáticamente. En este caso, repita lo anterior.

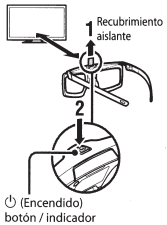

Para encender y apagar las gafas 3D

Para encender : Presione una vez el botón de encendido.
Para apagar : Mantenga presionado el botón de encendido durante 2 segundos.

Información adicional

Solución de problemas

Si experimenta problemas con este producto, consulte el i-Manual en su TV.
Consulte el sitio web de Sony para obtener la información más reciente.

Para Estados Unidos www.sony.com/tvsupport
Para Canadá www.sony.ca/support

Especificaciones

Tipo de batería

Batería de dióxido de Magnesio-Litio CR2025

Tiempo de funcionamiento (aprox.)

100 horas

El diseño y las especificaciones están sujetos a cambios sin previo aviso.

Información de marcas registradas

- "SimulView" es una marca comercial de Sony Computer Entertainment Inc.

SONY

3-299-071-**08** (1)

Safety and Regulatory Booklet US

Read and understand the contents of this booklet before operating your new TV.

Feuillet de consignes d'utilisation et de sécurité FR

Veuillez lire et vous assurer de comprendre le contenu de ce feuillet avant d'utiliser votre nouveau téléviseur.

Folleto de instrucciones de seguridad ES

Lea y entienda el contenido de este folleto antes de operar su nuevo televisor.

© 2008 Sony Corporation

Important Safety Instructions

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.

6) Clean only with dry cloth.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong.
The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/ accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Please observe the Additional Safety DOs and DON'Ts to avoid electrical shock, short-circuit, fire, bodily injury or property damage.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product must never be exposed to dripping, splashing, or spilling liquids of any kind.

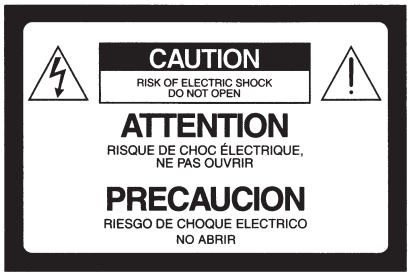

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Outdoor Antenna Grounding

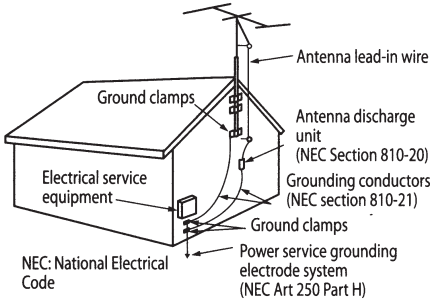

Additional Safety DOs and DON'Ts

US

MOISTURE

- ☐ Do not place liquid filled objects such as a vase or potted plant on the TV.
- ☐ Do not use a power line operated TV set near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, wet basement or near a swimming pool, etc.
- ☐ Do not install the TV in a location where sulfur is present (e.g., hot springs). This may cause a fire, electric shock or damage to your TV.

CLEANING

When cleaning, be sure to unplug the power cord to avoid any chance of electric shock.

- ☐ Clean the cabinet of the TV with a dry soft cloth.
- ☐ Wipe the LCD screen gently with a soft cloth.
- ☐ Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- ☐ Do not spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts, and may cause a malfunction.
- ☐ If using a chemically pretreated cloth, please follow the instruction provided on the package.
- ☐ Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- ☐ Periodic vacuuming of the ventilation openings is recommended to ensure to proper ventilation.

VENTILATION

The ventilation openings in the TV are necessary to ensure reliable operation of the TV and to protect it from overheating.

- ☐ Do not block or cover the ventilation openings with cloth or other materials.
- ☐ Never place the TV on a bed, sofa, rug or other similar surface where ventilation openings may be blocked.

☐ Unless proper ventilation is provided, the TV may accumulate dust and cause damage.

☐ Never allow liquid or solid objects to fall into the ventilation openings.

☐ If any liquid or solid object falls inside the TV, unplug the TV immediately and have it checked by qualified service personnel before operating it further.

☐ Never push objects of any kind into the TV through the ventilation openings as they may come in contact with dangerous voltage points or short out parts that could result in a fire or an electric shock.

Allow adequate space around the TV set to ensure proper air circulation.

☐ Never place the TV in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

☐ There should be a clearance of at least 11 7/8 inches (30 cm) above the TV set and 4 inches (10 cm) on each side. If mounted on the wall, allow at least 4 inches (10 cm) of clearance at the bottom of the screen. (See additional information provided in the Operating Instructions manual.)

INSTALLATION

The TV should be installed near an easily accessible AC power outlet.

☐ Do not install the TV face up or down, upside down or on its side.

☐ Do not install the TV in hot, humid, excessively dusty places or in areas with oily smoke or steam (e.g., near a stove or humidifier). Fire, electric shock, or warping may occur.

☐ Do not install the TV in places subject to extreme temperature, such as in direct sunlight, near a radiator or a heating vent. The TV may overheat in such conditions which can cause deformation of the enclosure and/or TV malfunction.



☐ Do not install the TV in a place exposed to direct air conditioning; moisture may condense inside and may cause TV malfunction.

☐ Do not install the TV where it may be exposed to mechanical vibration.

☐ Do not install the TV where insects may enter.

☐ Do not install the TV so that it protrudes into an open space. Injury or damage may result from a person or object bumping into the TV.



☐ To prevent fire keep flammable objects or open flame (e.g. candles) away from the TV.

☐ Do not place optional equipment on top of the TV.

Prevent the TV from toppling over

Take measures to prevent the TV from toppling over and causing injury or damage to the TV and property.

☐ Secure the TV to a wall and/or stand.

☐ Never install the TV on unstable and/or uneven surfaces.

☐ Do not allow children to climb on or play with furniture and TV sets.

☐ Do not install the TV on furniture that can easily be used as steps, such as a chest of drawers.

☐ Care should be taken to install the TV where it cannot be pushed, pulled over, or knocked down.

☐ Care should be taken to route all AC power cords and connecting cables so that they cannot be pulled or grabbed by curious children.

Medical institutions

Do not place this TV in a place where medical equipment is in use. It may cause a medical equipment malfunction.

Outdoor use

Do not install this TV outdoors. The TV should not be exposed to rain or direct sunlight in order to avoid damage and possible fire or electric shock.

Do not install this TV in a vehicle, ship or other vessel

☐ Excessive bumping motion of a moving vehicle or continuous swaying motion on a boat may cause the TV to fall down and cause injury.

☐ Exposing the TV to seawater may cause a fire, electric shock or damage to your TV.



Magnetic influence

☐ This TV contains a strong magnet in the speaker unit that generates a magnetic field. Keep any items susceptible to magnetic fields away from the speaker.

☐ Electro-magnetic radiation emitted from optional equipment installed too close to the TV may cause picture distortion and/or noisy sound.

Wall-mount use

☐ Wall-mount installation requires the use of a Wall-Mount Bracket. When installing or removing the TV and the Wall-Mount Bracket, be sure to use qualified contractors. If not properly secured during installation or removal from the Wall-Mount Bracket, the TV may fall and cause serious injury.

☐ Be sure to follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.

☐ Be sure to attach the brackets with the specified parts supplied with the Wall-Mount Bracket.

☐ Do not hang the TV from the ceiling. It may fall and cause serious injury.

☐ Do not hang anything on the TV.

☐ Do not allow children to climb on the TV.

AC POWER CORD

☐ Do not touch the AC power cord and its plug with wet hands as it may cause electric shock.

☐ When disconnecting the AC power cord, grasp the plug and disconnect from the wall outlet first. Do not pull by the cord.

☐ Keep the power cord away from heat sources.

A TV set with a three-wire grounding type AC power cord plug must be connected to an AC power outlet with a protective earthing connection (only applicable for Class I product).

☐ Do not convert or damage the AC power cord.

☐ Consult your electrician to have the outlet changed to suit your TV.

Subjecting the AC power cord to wear and/or abuse can damage the AC power cord and your TV.

☐ Do not place the TV where the power cord can be easily pinched, bent, twisted, or catch your feet.



☐ Do not allow anything to rest on or roll over the cord.

☐ Before connecting cables, be sure to unplug the AC power cord for your safety.

☐ Do not move the TV with the AC power cord (or other cables such as audio and video) connected.

☐ Use only an original Sony AC power cord with your TV; no brand substitution is allowed.

☐ Do not use AC power cord supplied with the TV with any other equipment.

☐ Never use a damaged AC power cord. A damaged AC power cord can cause a short-circuit, which may result in a fire or electric shock.

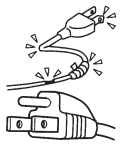

Do not use a damaged or poorly fitting AC power outlet as your TV's power source.

☐ Insert the plug fully into the outlet. If it is loose, it may cause arcing and result in a fire.

☐ Do not overload the same AC power outlet.

Unplugging the AC power cord from the wall outlet will completely remove power from the TV.

☐ During lightning storms or when the TV is left unattended and unused for extended periods of time, the AC power cord should be unplugged from the wall outlet. This will avoid possible damage to your TV. Also unplug the antenna to prevent damage to the TV.

☐ For energy conservation and safety reasons, practice unplugging the AC power cord from the AC power outlet.

Clean the AC power plug

Unplug the AC power plug and clean it occasionally to avoid dust from accumulating. While cleaning, look for signs of damage. A damaged AC power cord should never be used.

ACCESSORIES

Keep small accessories out of children's reach. Use only the specified accessories with this TV.

Volume Adjustment

- ☐ When using headphones, adjust the volume to avoid excessive audio levels from causing possible hearing loss.

BATTERIES

Your remote control batteries are consumables.

- ☐ Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority.
- ☐ Do not dispose of batteries in a fire.
- ☐ Do not short-circuit, disassemble or overheat the batteries.
- ☐ Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

LCD SCREEN

- ☐ Although the LCD screen is made with high-precision technology and has effective pixels of 99.99% or more, black dots or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD panel and is not a malfunction.
- ☐ The LCD screen is made with high-precision technology and to achieve a high level of performance and picture quality, this TV's backlight setting is set to maximize the brightness of the TV. However, uneven brightness may be observed when the LCD TV is viewed in a dark ambient without an input source or with a blank screen. This condition is normal and not a malfunction of the TV. Changing the Picture mode, Backlight setting, enabling the Light Sensor (if applicable), or turning on the Power Management will improve this condition.
- ☐ To avoid damaging the LCD panel, do not expose the LCD screen to direct sunlight.
- ☐ Do not push or scratch the LCD screen, or place objects on top of the TV. The images may be uneven or the LCD panel may be damaged.
- ☐ If the TV is used in a cold place, the picture may smear or become dark. This does not indicate a failure. These phenomena improve as the temperature rises.
- ☐ Ghosting may occur when still pictures are displayed continuously. It should disappear after a few moments.
- ☐ The LCD screen and enclosure get warm when the TV is in use. This is not a malfunction.
- ☐ Avoid spraying insect repellent with volatile material on the LCD screen.
- ☐ Avoid prolonged contact with rubber or plastic material to the LCD screen.

Broken screen panel

Do not throw anything at the LCD screen and its edges as the impact can cause the LCD screen glass to crack, break or shatter.

- ☐ If damage occurs to the LCD panel, small traces of liquid crystal sandwiched between the glass may be found on scattered broken glass.
- ☐ Do not touch the broken glass with bare hands. As with any broken glass pieces, avoid skin contact and exposure to your eyes or mouth. Avoid direct contact with liquid or damp surfaces of the glass as these may have an adverse effect on some people. The contacted area should be rinsed thoroughly with water. If conditions persist, see your doctor.
- ☐ If the surface of the TV cracks, do not touch the TV until you have unplugged the AC power cord. Otherwise electric shock may result.

SERVICING



Do not use the TV if you suspect the TV is damaged or if the TV is damaged.

- ☐ Do not attempt to service the TV yourself since opening the cabinet may expose you to dangerous voltage levels or other hazards. Refer all servicing to qualified service personnel.
- ☐ If replacement parts are required, acquire a written certification from the service technician which states that adequate replacement parts with the same or similar characteristics as the original parts have been used. Unauthorized substitutions may result in a fire, an electric shock or other hazards.

Safety check

- ☐ Upon completion of any TV servicing or repair, ask the service technician to perform routine safety checks as specified by Sony and to certify that the TV is safe to operate. Have a qualified service technician dispose of the TV if it is not safe to operate.

CAUTION

- ☐ Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above.

3-299-071-**08** (1)

Printed in U.S.A.

SONY

4180215112

ENGLISH

Preventing TV Tip-Over Accidents

The U.S. Consumer Product Safety Commission (CPSC) estimates that in 2005 at least 3,000 children younger than age 5 were treated in U.S. hospitals emergency rooms because of injuries associated with TV tip-overs. In addition, from 2000 through 2005, CPSC received reports of 36 TV tip-over deaths. More than 80 percent of all these deaths involved young children. The injuries and deaths frequently take place when kids climb onto, fall against or pull themselves up on shelves, bookcases, dressers, desks, chests and television stands. In some cases, televisions placed on top of furniture tip over and cause a child to suffer a traumatic and sometimes fatal injury.

FRANÇAIS

Éviter les accidents de renversement de téléviseur

La commission de surveillance des produits de consommation (CSPC) des É.-U. estime qu'en 2005 au moins 3 000 enfants de moins de cinq ans ont été traités dans les salles d'urgence des hôpitaux états-uniens pour des blessures associées à des renversements de téléviseurs. De plus, de 2000 à 2005, la CSPC a reçu des rapports de 36 décès causés par un renversement de téléviseur. Plus de 80 pour cent de ces décès impliquaient de jeunes enfants. Les blessures et les décès ont souvent lieu lorsque les enfants tombent contre, grimpent ou se hissent sur des tablettes, des bibliothèques, des commodes, des bureaux, des armoires et des supports de téléviseur. Dans certains cas, les téléviseurs placés sur des meubles se renversent et causent une blessure grave et parfois fatale à l'enfant.

ESPAÑOL

Prevención de accidentes por vuelco y caída del televisor

La Comisión de Seguridad de Productos de EE.UU. (CPSC) calcula que en el 2005 por lo menos 3,000 niños menores de 5 años recibieron tratamiento de emergencia en hospitales de Estados Unidos debido a las lesiones recibidas al volcarse un televisor. Asimismo, entre los años 2000 y 2005, la CPSC recibió informes de 36 muertes causadas por volcarse un televisor. Más del 80% de las muertes fueron de niños pequeños. Con frecuencia, las lesiones y muertes suceden cuando un niño se trepa a un televisor, cae sobre él o trata de subirse en repisas, roperos, escritorios o bases de televisor. En algunos casos, cuando se coloca un televisor encima de un mueble, éste puede volcarse y caer causando trauma físico y hasta la muerte en niños.

Watch Out!

Faites attention!

¡Cuidado!

The following safety tips are recommended to prevent furniture or TV tip-overs:

- Verify that television is placed only on furniture that is stable on its own. For added security it is recommended that you attach to the wall or anchor to the floor all entertainment units, TV stands, bookcases, shelving, and bureaus using appropriate hardware, such as brackets, screws, or toggles.
- Place the television on sturdy furniture appropriate for the size of the TV or on a low-rise base.
- Push the television as far back as possible.
- Place electrical cords and audio/visual cables out of a child's reach, and teach kids not to play with them.
- Remove items that might tempt kids to climb on or near the television, such as toys and remote controls, from top of the TV and furniture.

See the operating instruction for more information on how to secure the TV.

Les conseils de sécurité suivants sont recommandés pour éviter les renversements de meubles ou de téléviseurs :

- Assurez-vous que le téléviseur est placé seulement sur un meuble qui est stable par lui-même. Pour augmenter la sécurité, il est recommandé de fixer au mur ou au sol toutes les unités de divertissement, les supports de téléviseur, les bibliothèques, les tablettes et les bureaux au moyen de la quincaillerie appropriée, comme des supports, des vis ou des boulons à ailettes.
- Placez le téléviseur sur un meuble robuste approprié pour la taille du téléviseur ou sur une base basse.
- Poussez le téléviseur aussi loin que possible vers l'arrière.
- Placez les cordons électriques et les câbles audio/vidéo hors de la portée des enfants et montrez-leur de ne pas jouer avec eux.
- Retirez du dessus du téléviseur et des meubles les objets qui pourraient inciter les enfants à grimper sur ou près du téléviseur, comme des jouets ou des télécommandes.

Reportez-vous aux directives d'utilisation pour obtenir d'autres renseignements sur la façon de sécuriser le téléviseur.

A continuación se presentan algunos consejos de seguridad recomendados para prevenir el vuelco y la caída de televisores:

- Asegúrese de que el televisor solamente esté colocado sobre muebles que sean estables en sí. Para mayor seguridad, se recomienda que todas las unidades de entretenimiento, bases para televisor, libreros, repisas o burós se sujeten a la pared o al piso usando las ménsulas, tornillos o abrazaderas adecuadas.
- Coloque el televisor en un mueble sólido adecuado al tamaño del aparato o en una base que no sea alta.
- Coloque el televisor lo más atrás del mueble que sea posible.
- Coloque los cables eléctricos y del sistema audiovisual fuera del alcance de los niños y enséñeles a que no deben jugar con cables.
- Retire cualquier objeto como juguetes o controles remoto que esté encima del televisor o del mueble y que pudiera incitar a los niños a treparse en el televisor o cerca de él.

Consulte las instrucciones de funcionamiento para obtener más información sobre cómo asegurar el televisor.

© 2009 Sony Corporation Printed in Mexico

ENGLISH

Does your picture quality seem poor?
Do you have a cable or satellite box?

Factors other than your TV can affect picture quality.

1) Cable or Satellite Set-Top Box (STB)

Request an HD STB from your service provider and review your STB settings.

You may need to adjust your STB audio and picture settings, otherwise you may experience issues such as: Poor picture quality, black bars on the top or sides of the screen, no audio, empty black boxes on the screen.

Contact your service provider if you have any questions on STB usage.

2) Broadcaster

The broadcaster controls the quality of the program. Some programs are broadcast in High Definition (HD), while other programs are broadcast in Standard Definition (SD), even on HD stations.

HD broadcast
Crisp, clear picture

SD broadcast
Fuzzy picture, often with black bars

Type of content stations can broadcast:

	SD Station	HD Station
SD Content	X	X
HD Content		X
Both HD & SD content		X

SD content on HD channels does not create an HD picture!

3) Original Recording Quality

The quality of the picture you see also depends on the type of camera used when the original recording was made.

FRANÇAIS

Est-ce que la qualité de votre image semble mauvaise?
Est-ce que vous avez le câble ou un satellite?

Facteurs autres que votre téléviseur pouvant affecter la qualité de l'image.

1) Décodeur de câble ou satellite

Demandez un décodeur HD à votre fournisseur de service et examinez les réglages de votre décodeur.

Vous devrez ajuster les réglages de son et d'image de votre décodeur, sinon vous pourriez constater les problèmes suivants : mauvaise qualité d'image, barres noires dans le haut ou les côtés de l'écran, pas de son, boîtes noires vides à l'écran.

Communiquez avec votre fournisseur de service si vous avez des questions au sujet de l'utilisation du décodeur.

2) Télédiffuseur

Le télédiffuseur contrôle la qualité de l'émission.
Certaines émissions sont télédiffusées en haute définition (HD), tandis que d'autres sont télédiffusées en définition standard (SD), même sur des postes HD.

Télédiffusion HD
Image claire, précise

Télédiffusion SD
Image floue, souvent avec des barres noires

Type de contenu que les stations peuvent diffuser :

	Stations SD	Stations HD
Contenu SD	X	X
Contenu HD		X
Contenu HD et SD		X

Le contenu SD sur des canaux HD ne crée pas une image HD!

3) Qualité de l'enregistrement initial

La qualité de l'image que vous voyez dépend aussi du type de caméra utilisé lors de l'enregistrement initial.

ESPAÑOL

¿La calidad de la imagen no es óptima?
¿Tiene un receptor de cable o satélite?

Existen factores aparte del televisor que pueden afectar la calidad de la imagen.

1) Receptores de cable o satélite (Set-Top Box o STB)

Solicite un receptor de alta definición (HD) de la compañía que le ofrece el servicio y cheque la configuración del receptor.

Es posible que necesite ajustar la configuración de audio e imagen de su receptor, de no ser así, podría observar lo siguiente: mala calidad de la imagen, barras negras en la parte superior o en los costados de la pantalla, falta de audio, recuadros negros vacíos en la pantalla.

Comuníquese con la compañía proveedora de servicio si tiene alguna pregunta sobre el uso de su receptor.

2) Cadenas transmisoras

La cadena transmisora controla la calidad del programa. Algunos programas se transmiten en alta definición (HD), mientras que otros se transmite en definición estándar (SD) o hasta en estaciones de alta definición.

Transmisión en Alta Definición (HD)
Imagen clara y nítida

Transmisión en Definición Estándar (SD)
Imagen borrosa, con frecuencia aparecen barras negras

Tipo de contenido que las estaciones pueden transmitir:

	Estación SD	Estación HD
Contenido SD	X	X
Contenido HD		X
Contenido tanto HD como SD		X

¡El contenido SD en canales HD no crea una imagen en alta definición!

3) Calidad original de la filmación

La calidad de la imagen que ve también depende del tipo de cámara que se usó cuando se hizo la filmación original.

DON'T JUST WATCH TV. DIRECTV.™

Save $120^

A SPECIAL OFFER NOT AVAILABLE TO THE GENERAL PUBLIC!

You're getting a great price—
PLUS
$10 off every month for 12 months in addition to DIRECTV's current promotional prices.

When you order the ENTERTAINMENT Package or higher.

Every Package Includes:

FREE PROFESSIONAL INSTALLATION
IN UP TO 4 ROOMS

NO EQUIPMENT TO BUY
NO START-UP COSTS

LOCAL CHANNELS
IN HD IN OVER 98% OF THE U.S.[1]

All DIRECTV offers require a 24-month agreement.** Offers end 12/31/13.
Credit card required (except in MA & PA). New approved customers only (lease required). Hardware available separately.
Additional fees required. Complex/custom installation extra. $19.95 Handling & Delivery fee may apply. Applicable use tax adjustment may apply on the retail value of the installation. See inside for details.

Save $120 when you call this dedicated number

1-800-496-7068

or visit sony.directv.com for details.

DIRECTV service and offers not available outside of the U.S.

All programming and pricing valid as of December 2012.
Programming/pricing subject to change at any time.
Printed in U.S.A.

4198223032

A special offer for Sony customers.
Not available to the general public!

SAVE $120^

in addition to DIRECTV's current promotional prices in your area.

Activation of the ENTERTAINMENT Package or higher required. With 24-month agreement.**
Conditions apply. See inside for offer details.

Save $120 when you call this dedicated number

1-800-496-7068

or visit sony.directv.com for details.

DIRECTV service and offers not available outside of the U.S.

DIRECTV.

Upgrade to DIRECTV and get the ultimate TV experience!

THE MOST SAVINGS.

THE MOST TELEVISION.

FREE PROFESSIONAL INSTALLATION IN UP TO 4 ROOMS
Complex/custom installation extra.

NO EQUIPMENT TO BUY
NO START-UP COSTS

LOCAL CHANNELS
IN HD IN OVER 98% OF THE U.S.[1]

All DIRECTV offers require a 24-month agreement.** Offers end 12/31/13. Credit card required (except in MA & PA). New approved customers only (lease required). Hardware available separately. Additional fees required. $19.95 Handling & Delivery fee may apply. Applicable use tax adjustment may apply on the retail value of the installation. See below for details.

DIRECTV.

The channels you want!

Amazing Picture

DIRECTV delivers the full-time HD channels that you really want, including local channels[1], access to the best in 3D[7] and the most sports![3] You'll get access to movies in 1080p[4] with Dolby® Digital 5.1 Surround Sound[5], for a viewing experience that redefines home entertainment!

Access to the HD channels you want.

Genie™ from DIRECTV

Introducing Genie, the most advanced HD DVR ever, only from DIRECTV. An HD DVR so advanced, your every TV wish is granted.

- Genie serves your entire home with just one HD DVR.[8]
- Genie lets you record any 5 shows you want, all in HD.[9]
- Genie has up to 3 times more HD recording capacity than cable.[10]
- Genie lets you enjoy a full HD DVR experience on every TV in your home—without seeing boxes in every room.[8]

8. Requires C31 Client or an RVU-enabled TV/Device for each additional room. Additional fees apply. 9. Access to programming based on package selection. Blackout restrictions apply to sports programming. Program must air in HD to record in HD. 10. Comparison based on hours of HD recording with one Genie HD DVR setup (model HR34 only).

More sports! More ways to watch!

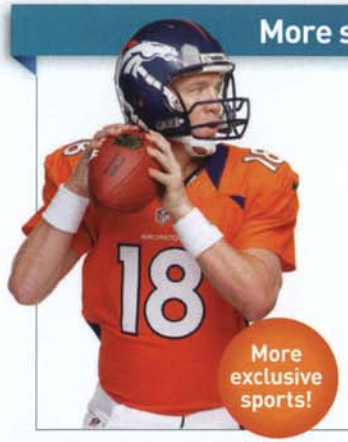

More exclusive sports!

NFL SUNDAY TICKET ONLY ON DIRECTV.

NBA LEAGUE PASS

BIG TEN NETWORK

CENTER ICE

DIRECTV NASCAR HOTPASS

No matter what game, no matter what season, no one has you covered like DIRECTV. With **exclusive packages, mix channels and advanced features,** you'll never miss a moment.[6]

Get everything DISH and cable don't give you!

	DIRECTV	DISH	Cable
Sharpest picture available with the most movies in 1080p,[4] many with Dolby® Digital 5.1 Surround Sound[5] Not all HD programming available in 1080p.	✓	✗	✗
Exclusive sports packages: NFL SUNDAY TICKET, NASCAR HotPass™[3]	✓	✗	✗
For 12 years in a row, DIRECTV rated higher in customer satisfaction than cable As compared to the largest national cable providers. 2012 American Customer Satisfaction Index.	✓	✗	✗
Special Offer: $120 Savings^	✓	✗	✗

The ultimate television experience!

#1 in Sports
From your favorite teams to your fantasy teams, DIRECTV sports coverage is undefeated.[3]

$0 Start-Up Costs
No equipment to buy. FREE professional installation.
Applicable use tax adjustment may apply on the retail value of the installation.

Access to the HD channels you want
More of the channels you really want to watch in full-time HD.[2]

SAVE $120 WHEN YOU CALL THIS DEDICATED NUMBER: 1-800-496-7068 or visit sony.directv.com for details.

When you order the ENTERTAINMENT Package or higher. 24-month agreement required.**

travel XD FX NETWORK We CN TCM ion 3net GMC Bloomberg tbs A&E TNT AUDIENCE ESPN 3D ESPNEWS TV GUIDE H2N Syfy HDNET MOVIES

^$120 BILL CREDIT OFFER: New customer must sign up using the phone number provided (1-800-496-7068) and order a leased system (on approved credit) by 12/31/13. Upon activation of DIRECTV System and the ENTERTAINMENT Package or higher, customer will receive 12 nonrefundable/nontransferable credits of $10 each over 12 DIRECTV billing cycles, totaling $120. In certain markets, a $3/mo. Regional Sports Fee will be assessed with CHOICE Package or above and MAS ULTRA Package or above. Commercial accounts/customers not eligible. Account must be in "good standing" as determined by DIRECTV in its sole discretion to remain eligible for all offers.

24-MONTH AGREEMENT; EARLY CANCELLATION WILL RESULT IN A FEE OF $20/MONTH FOR EACH REMAINING MONTH. Must maintain 24 consecutive months of your DIRECTV programming package. For each additional box and/or enabled TV on your account you are charged an additional fee of $6/mo. per box and/or enabled TV. **NON-ACTIVATION CHARGE OF $150 PER RECEIVER MAY APPLY. ALL EQUIPMENT IS LEASED AND MUST BE RETURNED TO DIRECTV UPON CANCELLATION, OR UNRETURNED EQUIPMENT FEES APPLY. VISIT directv.com OR CALL 1-800-DIRECTV FOR DETAILS.** Hardware and programming available separately. Additional fees required. DIRECTV Advanced Whole-Home HD DVR service requires a DIRECTV Advanced Whole-Home DVR model HR34 receiver ("Genie") connected to the primary television. Remote viewing requires a model C31, H25 HD Receiver(s) or RVU-capable TV/device in each additional room, a SWiM network and Advanced Receiver Service. Limit of three remote viewings per Advanced Whole-Home HD DVR at a time. Visit directv.com/genie for complete details. INSTALLATION: Standard professional installation in up to 4 rooms only. Custom installation extra.

1. Eligibility based on service address. Not all networks available in all markets. HD local channels not delivered in HD in all markets. 2. Number of HD channels varies based on package. To access DIRECTV HD programming, Advanced Receiver Service fee and HD equipment are required. 3. Most sports in HD based on national offering of exclusive sports packages and other major sports programming in HD. Blackout restrictions and other conditions apply. Actual number of games varies by market. Professional and collegiate sports subscriptions sold separately. 4. Limited titles available in 1080p. To view programs in 1080p, the following are required: Advanced Receiver Service ($20/mo.), an HD DVR receiver (model HR20 or higher), an HDMI cable connecting the receiver and the television, and a high-definition 1080p/24 television. Not all models are compatible. 5. Dolby Digital 5.1 surround sound only available when provided by programmer. Equipment available separately. 6. For full mix channel and interactive functionality, a D10 (or later model) interactive DIRECTV Receiver is required. Access to channels depends on programming package. 7. DIRECTV 3D content requires HD equipment including a compatible 3D HDTV and 3D glasses. For more information, visit directv.com/3D.

Programming, pricing, terms and conditions subject to change at any time. Pricing residential. Taxes not included. Receipt of DIRECTV programming subject to DIRECTV Customer Agreement; copy provided at directv.com/legal and in order confirmation. Programming, pricing, terms and conditions subject to change at any time. Pricing residential. Taxes not included. Receipt of DIRECTV programming subject to DIRECTV Customer Agreement; copy provided at directv.com/legal and in order confirmation. DISH is a registered trademark of Dish Network LLC. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. NFL, the NFL Shield design and the NFL SUNDAY TICKET name and logo are registered trademarks of the NFL and its affiliates. NFL team names and uniform designs are registered trademarks of the teams indicated. PHOTO CREDITS: Peyton Manning: James Michelfelder + Therese Sommerseth. ©2013 DIRECTV. DIRECTV and the Cyclone Design logo, GENIE and DON'T JUST WATCH TV. DIRECTV. are trademarks of DIRECTV, LLC. All other trademarks and service marks are the property of their respective owners.

SONY

LCD Television 18M

LIMITED WARRANTY (U.S. ONLY)

SONY ELECTRONICS INC. ("SONY") warrants this product against defects in material or workmanship for the original and any subsequent end user owner(s) ("You" or "Your") for the time periods and as set forth below when purchased directly from Sony or a Sony Retailer. Under this Limited Warranty, SONY will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. "Refurbished" means a product or part that has been returned to its original specifications. **These are Your exclusive remedies**. SONY does not warrant that the operation of the product will be uninterrupted or error-free.

Term: Eighteen (18) months from the original date of purchase of the product (or ninety (90) days from original date of purchase for commercial use). This Limited Warranty is transferable. However, any transfer of this product does not extend the term. **A copy of the dated receipt from Sony or a Sony Retailer or bill of sale from the original end user purchase is required to determine coverage. Online auction confirmations are not accepted for warranty verification**.

Product Coverage: Only the hardware components packaged with the Product are covered. Technical assistance for hardware or software usage and any software products are not covered. Any software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. When a product or part is exchanged, the original item becomes SONY's property. Any replacement product provided under this limited warranty may vary in the color and/or cosmetic design from the original product and may not include any original engraving or similar customization.

Instructions: You must contact SONY or an authorized servicer prior to returning any product for warranty service. SONY will not reimburse You for service performed by others. Unless otherwise instructed by SONY or an authorized servicer, You must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the facility specified by SONY.

For specific instructions on obtaining warranty service for your product,

Visit SONY's Web Site: www.sony.com/support
Or call the Sony Customer Information Service Center
1-800-222-SONY (7669)
For an accessory or part not available from Your authorized dealer, call:
1-800-488-SONY (7669)

If You purchased an extended service plan, please refer to the service plan for the coverage, duration and terms of service as they are not governed by this Limited Warranty.

Repair/Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer.

(See reverse for additional terms and conditions.)

Printed in USA

Limitations: This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to, (i) product issues due to acts of God or nature; (ii) misuse; (iii) accidental damage, including but not limited to, contact with liquid, extreme heat or foreign material; (iv) customer instruction, installation, set up adjustments or signal reception issues; (v) limitations of technology; (vi) modification of or to any part of the SONY product, including the antenna; (vii) cosmetic damage; (viii) use or installation inconsistent with the owner's manual and other SONY instruction; (ix) use of parts or peripherals not recommended by SONY; damage caused by servicing not authorized by SONY or third-party calibration; or (x) damage caused by computer or internet viruses, bugs, worms, Trojan Horses or cancelbots; or products purchased from other than Sony or a Sony Retailer. To determine if a retailer is part of the Sony Retailer Network, please contact Sony's Customer Service Call Center or go to **www.sonystyle.com/retailernetwork**. This Limited Warranty does not cover up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated). A Display contains hundreds of thousands of individual pixels. Displays typically contain a small number of pixels that do not function normally.

This Limited Warranty does not cover SONY products sold "AS IS", "Open Box", "WITH ALL FAULTS" or similar notations and does not cover consumables (such as fuses or disposable batteries). SONY will not replace missing components from any package purchased "AS IS", "Open Box" or through an online auction. This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only on products purchased and located in the United States (excluding territories) or United States military facilities.
SONY specifically does not represent that it will be able to repair any product under this warranty or make a product exchange without risk to or loss of programs or data.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT NOR SHALL RECOVERY OF ANY KIND AGAINST SONY BE GREATER THAN THE PURCHASE PRICE OF THE PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. WITH RESPECT TO COMMERCIAL PURCHASERS, ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED AND DISCLAIMED.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to You. This Limited Warranty gives You specific legal rights and You may have other rights which vary from state to state.

No Sony reseller, agent or employee is authorized to make any modification, extension or addition to this warranty.

4448477011